www.ycpiano.co.kr 커즈와일의 행복한 전자악기 이야기 blog.naver.com/yckurzweil ok(페이스북) Http://www.facebook.com/kurzweilr

하여야 합니다.



HDC 영창

KAG40

USER'S

MANUAI

국문 매뉴얼

# HDC 영창

전면패널

■ 제품에 문제가 발생하면 서비스 센터에 맡기십시오.

MIC CHA

 $(\mathbf{A})$ 

노출되거나 정상적으로 작동 하지 않을 때만 서비스를 받을 수 있습니다.

# 소개하기

KAC40의 구입을 감사드립니다. 본 제품의 안전한 사용과 기능을 최대한 사용하기 위해서 본 사용 설명서의 내용을 주 의 깊게 읽으십시오.

이 제품은 강력한 사운드의 퀄리티를 자랑하며 휴대하기 상당히 용이합니다. 소규모의 라이브의 연주에서 30W의 출력 으로 연주할 수 있으며, 제품이 전원이 최대로 충전되었을 때 최대 3시간 동안 사용이 가능합니다. 또한, DSP 회로를 사용하여 질 높은 음질을 구현합니다.

# 주요 기능

- 이 앰프의 특징과 EQ 커브는 어쿠스틱 기타의 사용에 최적화 되어 있습니다.
- 40와트의 출력 (20와트 + 20와트)
- 3개의 DSP효과(코러스, 딜레이, 리버브)를 제공하는 DSP 칩 장착
- 3개의 DSP효과를 동시에 사용할 수 있습니다.
- 마이크 채널을 사용하여 높은 음질을 보컬 사운드를 설정할 수 있습니다.
- 마이크 채널에서 리버브 레벨을 조절할 수 있습니다.
- AUX IN에 CD/MP3 플레이어 또는 음향 장치를 연결할 수 있습니다.
- 배터리 충전 기능으로 야외 연주를 지원합니다.
- 배터리가 완전히 충전되었을 시, 최대 3시간 동안 사용할 수 있습니다.

# 주의 사항

- 사용 설명서를 주의 깊게 읽으십시오.
- 사용 설명서를 잘 보관 하십시오.
- 주의 사항에 항상 유의하십시오.
- 사용 설명서에 따라 사용하십시오.
- 물이 있는 근처에서 제품을 사용하지 마십시오.
- 마른 천으로만 제품을 청소하십시오.
- 난방 기구, 조리 기구 또는 열을 발생하는 장치 근처에 제품을 두지 마십시오.
- 안전을 위해 만들어진 분극이나 접지 형태의 플러그를 훼손 시키지 마십시오. 분극 플러스는 두개의 날을 있으며 하 나가 다른 하나의 날보다 넓습니다. 접지형 플러그는 두개의 날과 하나의 접지용 가지가 있습니다. 넓은 날과 세 번 째 접지용 가지는 안전을 위해 제공된 것입니다. 제품과 함께 제공된 플러그가 당신의 콘센트에 맞지 않을 경우에는 기술자와 상의한 뒤 교체하십시오.
- 특히 플러그, 콘센트 그리고 기기에서 나오는 전선 부위가 밟히거나 끼지 않도록 보호하십시오.
- 제품을 사용한 뒤 전원을 끄십시오.
- 제품 구입시 포함된 AC 어댑터만 사용하십시오. 잘못된 어댑터의 사용은 고장을 유발할 수 있습니다.
- 이 제품의 어댑터는 전자기 검사와 안전 검사를 통과 하였습니다.
- 절대 카트, 스탠드, 선반 또는 테이블 위에 제품을 두지 마십시오. 카트를 사용해야 할 경우, 제품이 손상되지 않도 록 주의하십시오.
- 장시간 사용 하지 않을 시 전원 플러그를 뽑아 주십시오.



■ 전선이나 플러그가 훼손되었을 때, 액체를 기기에 쏟거나 물체를 기기 위에 떨어뜨렸을 때 또는 제품이 비나 습기에

Kac4ø

ACOUSTIC GUITAR

P

BATTERY POWER

<u>,</u>

O

KURZWEIL



⑤ DC 전원 단자: 어댑터를 연결하십시오. (15V/DC/4A 중극)

03

⑥ AUX/INPUT: 스테레오 헤드폰 인풋(3.5)에 CD/MP3 플레이어 또는 음향 장치를 연결할 수 있습니다.



# TV / RADIO등 전기 기기와의 전자파 간섭

다른 기기의 상태를 확인하십시오.

전자파 간섭이 발생하면 다음과 같은 방법으로 해결하시기 바랍니다.

경고 : 당사의 승인이 없이 이루어진 제품의 변경 및 수정은 소비자의 권리를 상실케 한다. 본 기기가 라디오나 TV와의 전파 간섭의 원인이 되는지 확인하려면 제품의 전원을 끄고 중요사항 : 제품을 다른 장치와 연결할 때에는 반드시 차폐된 고품질 케이블을 사용

NOTE: 본 기기는 국내 MIC 및 FCC Part 15 Calss B 규격을 충족할 수 있도록 설계 ·수신 안테나의 방향을 바꾸거나 재배치합니다 되었습니다. 이러한 기준은 제품을 가정용으로 사용시 타 기기와의 간섭을 적절하게 · 본 기기와 TV 수상기를 멀리 떨어뜨려 줍니다.

방지할 수 있도록 설정되어 있습니다. 본 기기는 전자파 에너지를 발생시킬 수 있으며, • 본 기기를 수상기가 연결되지 않은 회로의 코드에 연결합니다. 설치 정보에 따르지 않을 경우 타 기기와의 간섭을 일으키지 않는다고 보증할 수는 필요한 경우, 지역 유통업자나 전문 라디오/텔레비전 전문가에게 의뢰 하십시오

전 중에는 노란 불이 들어오며 충전이 완료되면 불이 꺼집니다.

3. 배터리 알림 등에 파란 불이 들어오면, 즉시 충전하십시오.

AC 어댑터 인풋: AC 100-240V 50-60Hz

패달 기타 채널: 코러스, 딜레이(최대 500ms), 리버브

AC 어댑터 아웃풋: DC 15V/4A

기타 인풋 감도: -11.5dBV

마이크 인풋 감도: -41dBV

AUX IN 감도: -11.5dBV

출력: 40W (20W+20W)

패달 마이크 채널: 리버브

크기: 40 x 21 x 26.5 cm

무게: 8.35kg

DC 전압: 12V/7.0Ah (납산 배터리)

주의: 충전 중에 전원의 코드를 뽑으면 배터리 수명에 지장을 줄 수 있습니다.

2. 기기의 위/아래를 반대하여 두지 마십시오. 이는 배터리의 손상에 영향을 줄 수 있습니다.

4. 배터리가 완전히 충전 되었는데 악기의 사용이 1시간 이하로 줄어들면 배터리를 교체하십시오.

1. 기기를 장시간 동안 사용하지 않으면 두 달에 한번 충전을 하십시오.

# 이 안전 사용법을 지키세요

배터리 알림등에 파란 불이 들어오면 기기를 충전하십시오. 전원을 끈 뒤, DC 전원 단자에 어댑터에 연결하십시오. 충

01



제조연율

제조/판매지 제조국가

식별부호

이 기기는 가정용(B급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며,

· 상호와 제품명 및 본 매뉴얼에 대한 저작권은 **HDC 영창**에 있습니다. · 제품의 주요 특징 및 사양은 알림없이 변경될 수 있습니다.

B급 기기(가정용 방송통신기자재)

모든 지역에서 사용할 수 있습니다.

· 2019 모든 저작권은 HDC 영창에 있습니다.

KAC40 은 **HDC 영창**의 상품명입니다.

HDC 영창(주)

02

중국

#### 모 델 명 KAC40 Amplifie **HDC 영창** 제품의 Serial No.

- 판매 대리점 대리정 연락처
- 제품에 대한 보증을 실시합니다. \* 제품의 고장 발생 및 서비스 요청시 HDC영창서비스센터 또는 지정된 협력업체로 문의하시기 바랍니다
- \* 보상여부 및 내용통보는 요구일로부터 7일 이내에, 피해보상은 통보일로부터 14일 이내에 해결하여 드립니다.

\* 제품 구입일로부터 보증기간(1년, 상업용도 사용시 6개월) 이내에 정상적인 상태에서 제품에 이상이 발생한 경우에는 당사가 무상으로 서비스를 실시합니다

소비자 피해 유형			보 상 내 역	
			품질보증기간 이내	품질보증기간 이후
정상적인 사용상태 에서 발생한 성능, 기능상의 하자로 고장 발생시 소비자의 고의 및 과실로 의한 고장의 경우	구입 후 10일 이내에 중요한 수리를 요할 때		제품교환 또는 구입가 환급	해당 없음
	구입 후 1개월 이내에 중요한 수리를 요할 때		제품교환 또는 무상수리	
	제품구입시 운송 및 설치 과정에서 발생한 피해			
	교환된 제품이 1개월 이내에 재차 중요한 수리를 요하는 고장 발생 시		구입가 환급	
	교환 불가능시			
	수리 가능	동일 하자로 3회까지 고장 발생시	무상수리	유상 수리
		동일 하자로 4회까지 고장 발생시		유상 수리
		서로 다른 하자로 5회째고장 발생시		유상 수리
	소비자가 수리 의뢰한 제품을 사업자가 분실한 경우		제품교환 또는 구입가 환급	정액 감가상각한 금액에 10%를 가산하여 환급(최고한도:구입가격)
	부품 보유기간 이내 수리용 부품을 보유하고 있지 않아 수리가 불가능한 경우			
	수리용 부품은 있으나 수리 불가능시			정액 감가상각 후 환급
	수리가 불가능한 경우		유상수리에 해당하는 금액 징수 후 제품 교환	유상수리 금액 징수 후 감가상각 적용 제품 교환
	수리가 가능한 경우		유상수리	유상수리

#### ■ 유상 서비스

\* 아래와 같은 경우에는 서비스 비용에 대해 소비자에게 유상으로 청구할 수 있습니다.

<ol> <li>제품 고장이 아닌 경우</li> <li>고장이 아닌경우 서비스를 요청할 시에는 출장비를 청구할 있으므로 반드시 사용설명서를 읽어 주십시오.</li> <li>* 건반세척, 제품설치, 사용설명 등은 제품 고장이 아닙니다.</li> </ol>	수
* 사용설명 및 분해하지 않고 간단한 조정시 * 외부 안테나(외부환경) 및 유선신호 관련 서비스 요청시 * 판매점에서 부실하게 설치해 주어 재 설치시	1회 무상 서비스 2회부터 유상 /
<ul> <li>제품의 이동, 이사 등으로 인한 설치 부실</li> <li>구입시 고객요구로 설치한 후 재설치시</li> <li>소비자 설치 미숙으로 재설치할 겨우</li> <li>건반세척 및 이물질 투입에 대해 서비스 요청시</li> <li>컴퓨터와의 연결 및 단사 프로그램 사용시</li> </ul>	1회부터 유상 /

© TOW RET TOF 01
<ul> <li>소비자의 취급 부주의 및 잘못된 수리로 고장 발생시</li> <li>전기 용량을 듣기게 사용하여 고장이 발생된 경우</li> <li>설치 후 이동시 딸여뜨림 등에 의한 고경, 손상 발생시</li> <li>당시에너비 지지장한 소모용, 음션품 사용으로 고장 발생시</li> <li>거즈와일 서비스센터 기사 및 협력사 기사가 아닌 사람이 수리하여 고장 발생시</li> </ul>
③ 그 밖의 경우
* 서비스 기사의 정당한 보증서 제시 요구에 제시가 없을 경우 * 천재지변(하재, 염해, 수해 등)에 의한 고장, 손상 발생시

② 소비자 과실로 고장인 경우

소모성 부품의 무상기간은 6개월까지 • 아답터, 페달, 전기선, 헤드폰, 의자

# HDC 영창

이 보증서는 대한민국 국내에서만 유효하며 다시 발행하지 않으므로 사용설명서와 함께 잘 보관하시길 바랍니다.



배터리

파라미터

제품보증서





#### ■ 무상 서비스

제품의 종류

구 입 일

사용자 안내문

\* 본 제품은 가정용으로 설계된 제품으로 소비자가 영업용도로 전환하여 사용할 경우에는 보증기간이 반으로 단축 적용됩니다.



HDC YOUNG CHANG

KAG40

USER'S

MANUAL

English Manual

#### HDC YOUNG CHANG

196, Bongsu-daero, Seo-gu, Incheon, Korea

# Kurzweil International Contacts

Contact the Kurzweil office listed below to locate your local Kurzweil representative

#### **US Customers:**

American Music & Sound 925 Broadbeck Dr #220 Newbury Park, CA 91320

Tel: 800-431-2609 Fax: 818-597-0411 Email: info@americanmusicandsound.com

## Incheon, Korea Tel: +82-32-570-1000 Fax: +82-32-576-2340

Customers outside the US:

HDC Young Chang Co., LTD.

178-55, Gajwa-Dong, Seo-Ku



support@kurzweil.com

www.kurzweil.com

Image: system statewww.facebook.com/kurzweilmusicsystems/Image: system statewww.twitter.com/KurzweilMusicImage: system statewww.twitter.com/kurzweilTutorials



## INTRODUCTION

Thanks for purchasing our KAC40. In order to use this product more safely and get the full use of its features, please read this User Manual carefully and keep it for future reference. While retaining the high sound quality, it is more powerful, more portable and therefore a great choice for outdoor performances.

Its 40W (RMS) power can easily meet the requirements for small live shows, and can be used as long as 3 hours continuously when fully charged.

#### Main Features

An amplification characteristic and EQ curve specifically designed for acoustic guitars.

■40 W of power (20W+20W).

■Built-in high-performance DSP chip to provide 3 DSP effects (CHORUS.DELAY.REVERB).

■3 DSP effects can be used simultaneously.

A dynamic microphone channel gives you a clear and powerful vocal sound.

Mic channel features a reverb.

■AUX IN to connect CD player, MP3 or devices alike.

- Built-in rechargeable battery to support outdoor performances.
- ■As long as 3 hours of usage when fully charged.

#### IMPORTANT NOTES

Read these instructions.

Keep these instructions.

Heed all warnings.

- ■Follow all instructions. ■Do not use this device near water.
- Clean only with a dry cloth.

Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.

■Please unplug this device after usage for energy conservation.

Please use only the included AC power adapter. Other adapters may not be compatible with the KAC40's input voltage and might cause damage or accidents.

The included adapter has passed the electromagnetic compatibility and safety test. We don't guarantee the safety performance when used with third party adapters.

■Never use with a cart, stand, tripod, bracket, or table except as specified by the manufacturer, or sold with the device. When a cart is used, use caution when Moving the cart/apparatus combination to avoid injury from tip-over.

Unplug this device during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to Rain or moisture, does not operate normally, or has been dropped.





9. This product may be equipped with a polarized line plug (one blade wider than the other). This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace your obsolete outlet. Do not defeat the safety purpose of the plug.

The power supply cord of the product should be unplugged from the outlet when left unused for a long period of time. When unplugging the power supply cord, do not pull on the cord, but grasp it by the plug.

. Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

. The product should be serviced by qualified service personnel

A. The power supply, power cord or plug have been damaged;

B. Objects have fallen, or liquid has been spilled into the

D. The product does not appear to be operating normally or exhibits a marked change in performance;

E. The product has been dropped, or the enclosure damaged. Do not attempt to service the product beyond that described in the user maintenance instructions. All other servicing should be referred to qualified service personnel.

14. WARNING: Do not place objects on the product's power supply cord, or place the product in a position where anyone could frip over, walk on, or roll anything over cords of any type. Do not allow the product to rest on or be installed over cords of any type. Improper installations of this type create the possibility of a fire barard and/or percend injunct.

C. The product has been exposed to rain;

#### **IMPORTANT SAFETY & INSTALLATION INSTRUCTIONS**

INSTRUCTIONS PERTAINING TO THE RISK OF FIRE ELECTRIC SHOCK , OR INJURY TO PERSONS

product.

- WARNING: When using electric products, basic precautions should always be followed, including the following:8. The product should be connected to a power supply only of the type described in the operating instructions or as marked on the 1. Read all the Safety and Installation Instructions and Explanation of Graphic Symbols before using the product.
- This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product electric current to reduce the tisk of electric shock. This product is equipped with a power supply cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.
- DANGER: Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Do not modify the plug provided with the product if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use an adaptor which defeats the function of the equipment-grounding conductor. If you are in doubt as to whether the product is properly grounded, check with a qualified serviceman or electrician.
- Do not use this product near water for example, near a bathtub, washbowl, kitchen sink, in a wet basement, or near a swimming pool, or the like.
- 4. This product should only be used with a stand or cart that is recommended by the manufacturer.
- 5. This product, either alone or in combination with an amplifier and speakers or headphones, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist.
- 6. This product should be located so that its location or position does not interfere with its proper ventilation.
- 7. The product should be located away from heat sources such as radiators, heat registers, or other products that produce heat.

# Improper installations or une a hazard and/or personal injury. **RADIO AND TELEVISION INTERFERENCE**

- WARNING: Changes or modifications to the instrument not expressly approved by Young Chang could void your authority to operate the instrument.
   Increase the separation between the instrument and the receiver.
   Connect the instrument into an outlet on a circuit other than the instrument.
- Connect the instrument into an outlet on a circuit other than the one to which the receiver is connected. IMPORTANT: When connecting this product to accessories and/or other equipment use only high quality shielded cables. If necessary consult your dealer or an experienced radio/television technician for additional suggestions.
- The control of the product may be disturbed by strong electromagnetic interference. If so, simply reset the product to resume flowing the instructions in the manual. If normal function does not resume, please use the product to resume this instrument does cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installed and installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installed installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installed installed and used in accordance with the instructions in the accordance the interference to radio or television or the ris encouraged to try to correct the interference by the following measures:
- · Reorient or relocate the receiving antenna
- Le present appareil numerique n'emet pas de bruits radioelectriques depassant les limites applicables aux appareils numeriques de la class B prescrites dans le Reglement sur le brouillage radioelectrique edicte par le ministere des Communications du Canada.

# SAVE THESE INSTRUCTIONS

01

# **FRONT PANEL**



- 7. DELAY: Adjust the delay time
- REVERB: Adjust the ratio of wet signal
- 9. MIC INPUT
- 10. MIC/VOLUME: Volume control for microphone channel
- 11. REVERB: Reverb control for microphone channel
- 12. Power Indicator
- 13. Mains Power
- 14. Power switch



15.DC Mains Input: Connect the included adaptor (15V/DC/4A Center Positive) 16.AUX/INPUT: Stereo headphone input (3.5) to connect a CD player, MP3 or devices alike.

# **IMPORTANT SAFETY INSTRUCTIONS**

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth
- 7) Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet
- 10) Protect the power cord and power supply adapter from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



2) Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

11) Only use power adapters and attachments/accessories specified by the manufacturer.

13) Unplug this apparatus during lightning storms or when unused for long periods of

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.

To completely disconnect this equipment from the AC Mains, disconnect the power supply cord plug from the AC receptacle.



## BATTERY MAINTENANCE

When the power LED becomes blue, it indicates that the battery needs to be charged. Please turn off the amp, connect the cable with adapter and plug into DC15/4A port. The indicator lights Yellow in charging and turns off automatically when it is fully charged. Note: Please do not disconnect the power when it is charging, or it will lessen the batter life.

1. If your amplifier is unoccupied for a long period of time, the battery should be charged every two months to avoid battery aging. 2.Don't put this device upside down. Otherwise the liquid may spill to damage

batterv 3. When the indicator becomes BLUE, please charge it timely to preserve battery

life

4. If the amp can only work for less than 1 hour after fully charged (with normal use and maintenance), it is time to replace the battery.

#### PARAMETERS

AC adaptor input voltage: AC100-240V 50-60Hz AC adaptor output voltage: DC15V/4A DC Voltage: 12V/7.0Ah (Lead acid battery) Guitar input sensitivity: -11.5dBV Microphone input sensitivity: -41dBV AUX IN sensitivity: -11.5dBV RMS: 40W (20W+20W) Pedal-Guitar channel: Chorus, Delay (Maximum 500ms), REVERB Pedal-MIC channel: REVERB Dimension:40\*21\*26.5cm Weight:8.35kg