

KEYMAPS		
	3700	PC3A Piano p
	3701	PC3A Piano mp
	3702	PC3A Piano mf
	3703	PC3A Piano f
	3704	PC3A Piano ff
	3705	PC3A Piano fff
	3706	Stein As
	3707	Stein Bs
	3708	Stein Cs
	3709	Stein Ds
	3710	Stein Es
	3711	Stein Fs
	3712	Stein Gs
	3713	B4 Thump
	3714	Damper Pedal fas
	3715	Pedal Release 1
	3716	Pedal Release 2