

Caring for Your Kurzweil Music Rack KMR-2

Your Kurzweil music rack is beautifully constructed from a lustrous and exceptionally durable acrylic material. If you follow the care suggestions below, your music rack will retain its attractive appearance for many years.

Physical Damage - Avoid forceful contact with sharp or abrasive objects such as knives, bricks or cement blocks, and protruding staples. Very hot objects may also damage the surface.

Dusting - Dust with a soft, damp cloth, such as flannel or chamois. Avoid dry or gritty cloths and paper towels.

Cleaning - Wash your music rack with mild dish detergent and plenty of warm water. Use a soft cloth and light pressure. Rinse with clear water and dry by blotting with a slightly damp soft cloth or chamois.

Grease, oil, tar, and gummy adhesive may be removed with paint thinner, naphtha, or kerosene. Any oily film left after using these solvents should be removed by washing as described above.

DO NOT use window cleaners, scouring compounds, or strong solvents like acetone, lacquer thinner, gasoline, or carbon tetrachloride.

Polishing - Protect your music rack and maintain its gloss by occasionally waxing with a good paste wax. Apply a thin, even coat with a soft cloth then polish lightly with new, clean, dry cloth. Finally, wipe with a slightly damp cloth. Waxing will help eliminate static which can attract dust.

Removing Scratches - Fine scratches can be removed by hand polishing. Apply a good, petroleum-free paste wax to a soft cloth and rub the scratched area. When the scratches have disappeared, remove all residue and polish as above.

For deep scratches, first sand lightly with 400-grit wet sandpaper using plenty of water and rinsing the sandpaper frequently. Follow by vigorous buffing, preferably with a buffing wheel and a good buffing compound. Follow the fine scratch removal process above to complete the job.

Anti-Static Coatings - Anti-static cleaners for plastics are available. Apply according to the product's directions. Once treated, wiping with a soft damp cloth or chamois is all that is necessary to keep your music rack dust-free between applications.