

Packing List

Your PC2 carton should contain the following:

- PC2 or PC2X Performance Controller
- Power adapter
- Piano-style switch pedal
- Four adhesive-backed rubber feet
- *The Musician's Guide*
- Warranty card

Call your Kurzweil dealer if you find damaged or missing items.

Please see the other side of this sheet for important information about the *Musician's Guide*.

Errata

On page B-9 of the *Musician's Guide*, the table listing the MIDI Controllers is numbered incorrectly. The following table shows the correct MIDI Controller numbers.

	None						
0	Bank MSB	32	Bank LSB	64	Sustain	96	DataInc
1	Mod Wheel	33		65	Port Switch	97	DataDec
2	Breath	34		66	Sosten	98	NRg LBS
3		35		67	Soft	99	NRg MSB
4	Foot Control	36		68	Legato	100	Rg LSB
5	Port Time	37		69	Hold2	101	Rg MSB
6	Data MSB	38	Data LSB	70	SndCtl1	102	
7	Volume	39		71	SndCtl2	103	
8	Balance	40		72	SndCtl3	104	
9		41		73	SndCtl4	105	
10	Pan	42		74	SndCtl5	106	
11	Expression	43		75	SndCtl6	107	
12	EfxCt 1	44		76	SndCtl7	108	
13	EfxCt 2	45		77	SndCtl8	109	
14		46		78	SndCtl9	110	
15	AuxBnd2	47		79	SndCtl10	111	
16	Gen 1	48		80	Gen 5	112	
17	Gen 2	49		81	Gen 6	113	
18	Gen 3	50		82	Gen 7	114	
19	Gen 4	51		83	Gen 8	115	
20		52		84	PortCtl	116	ArpOn
21	AuxBnd1 MSB	53		85		117	ArpVel
22		54		86		118	Latch2
23		55		87		119	Latch1
24		56		88		120	SndOff
25		57		89		121	RstCtl
26		58		90		122	LclCtl
27		59		91	FXBWet	123	NtsOff
28		60		92	FXABWet	124	OmniOf
29		61		93	FXAWet	125	OmniOn
30		62		94	FXRoute	126	MonoOn
31		63		95	Ef5 Dpt	127	PolyOn