What's Included



Piano Body Bolts (A) x 6



Back Panel Bolts (B) x 2



Back Panel Bolts (C) x 4



Pedal Board Bolts (D) x 4



Headphone Holder Bolts (E) x 4



Cable Clips (F) x 4



Headphone Holder




Piano





Back Panel



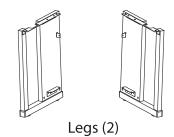


Attaching the Pedal Board

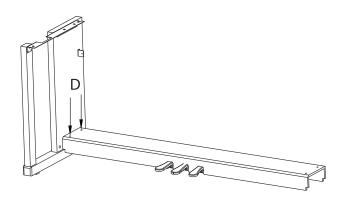

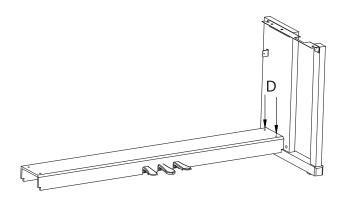


Starting with the right Stand Leg, align the holes in the Pedal Board with the holes in the Pedal Board Bracket as shown. Make sure that the pedals are facing towards the front of the Stand Legs. Thread two Pedal Board Bolts (D) through the Pedal Board and into the bracket. Repeat with the left Stand Leg and tighten all bolts fully.

Attaching the Back Panel and Piano Body

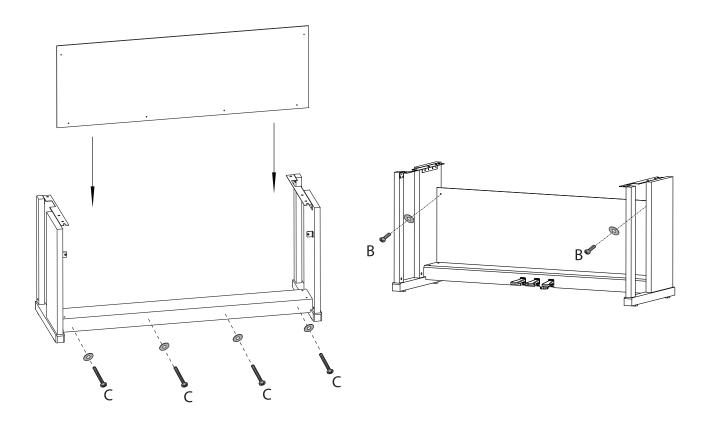


Using four Back Panel Bolts (C) with washers, and two Back Panel Bolts (B) with washers, attach the Back Panel to the stand.

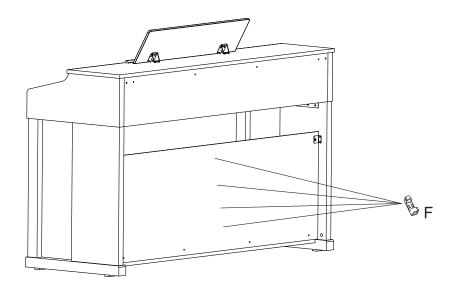

Attach four cable clips(F) to secure the cable.




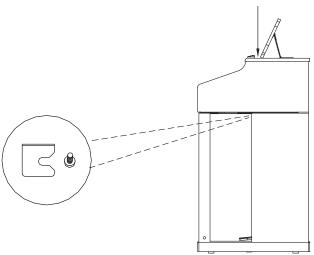

With help from another person, lift the piano onto the stand and slide forwards, pushing the guide rods on the bottom of the piano into the slots on the Stand Legs, as shown below.


When lifting the piano onto its stand, be careful not to catch/trap hands or fingers.

Securing the Piano Body

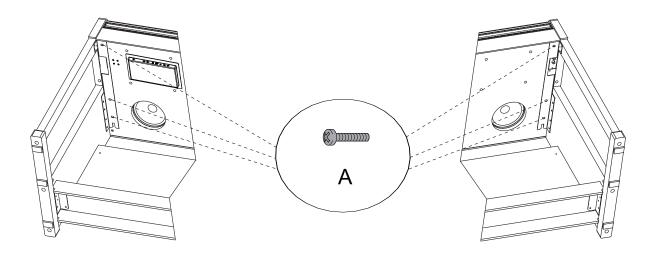


Finish attaching the piano to the stand by using the six Piano Body Bolts (A) to attach the bottom of the piano to its stand.

Installing the Headphone Holder

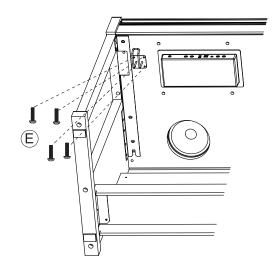


Headphone Holder Installation: Attach the headphone holder to the bottom left of the piano with the four Headphone Holder Bolts (E).

Connecting the Pedal Cable and Power Supply

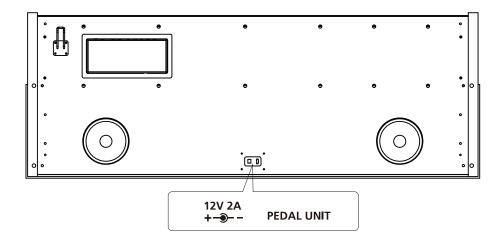


Attach the DC Adaptor and Pedal Cable into their connectors on the bottom of the piano as shown.

Installation precautions for pedal

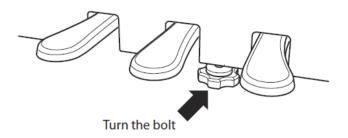

Turn the Pedal Support Bolt beneath pedals counter-clock until bolt firmly rests on the floor.

 Bench



B I # 🗎 X4

C X4

