

Kurzweil K2700 - Shortcuts Cheatsheet

General Shortcuts

1. Intuitive Entry - press+hold 'Enter', move physical controller
2. Search String - press+hold Enter & numeric key
3. Navigate Search String results - press+hold Enter & Next/Previous buttons
4. MIDI Panic - press Enter+'Keypad' button
5. Program Demo - press 'Keypad'+ '0'
6. Song Demo - press 'User'+ '0'
7. Reset transpose - press '+' & '-' transpose buttons together
8. Global Tools Page - press+hold soft buttons 3 & 4
9. Select Track 1 (song mode) - press Channel/Zone/Track 'up'+ 'down' buttons

Program Mode Shortcuts

1. Solo Layer - 'Program' mode button
2. Mute Layer - 'Multi' mode button
3. FX Bypass - 'Song' mode button
4. Compare (program mode edit) - 'Global' button
5. Select Layer 1 - press Channel/Zone/Track 'up'+ 'down' buttons

Multi Mode Shortcuts

1. Solo Zone - 'Program' mode button
2. Mute Zone - 'Multi' mode button
3. FX Bypass - 'Song' mode button
4. Select Zone 1 - press Channel/Zone/Track 'up'+ 'down' buttons
5. Zone operations (create zone, delete, duplicate) - Tools Page
6. Import zone from other multis - 'IMP ZN' on Tools Page
7. Import Pad Settings from other multis - 'IMP M Pad' on Tools Page
8. Import Pads from selected Program (current zone) - 'IMP P Pad' on Tools Page

Default One-Touch Assignments

Default controller assignments - applies to knobs/sliders/switches for programs

No.	KNOB	SLIDER	SWITCH (on/off)
1	Bass Gain (EQ)	Filter Cutoff	EQ ENABLE
2	Mid Gain (EQ)	Filter Resonance	PRESENCE
3	Mid Frequency (EQ)	Attack	IMPACT
4	High Gain (EQ)	Release	FREEZE
5	Motion Rate	Motion Amount	MOTION
6	FX 1 Rate/other*	FX 1 Amount*	FX1*
7	FX 2 Rate/other	FX 2 Amount	FX2
8	Delay Time	Dry/Wet Control - Delay Amount	DELAY
9	Reverb Time	Dry/Wet Control - Reverb Amount	REVERB

**Controllers no. 6 in piano programs correspond to Kurzweil String Resonance values - string resonance decay (knob), resonance amount (slider), on/off (switch).*