

KURZWEIL

MPS20

**USER'S
MANUAL**

English Manual

YOUNG CHANG

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.




11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Allow adequate ventilation for the power adapter. Do not hide it under a carpet or behind a curtain or place it in an enclosed space where heat buildup can occur.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.

To completely disconnect this equipment from the AC Mains, disconnect the power supply cord plug from the AC receptacle.

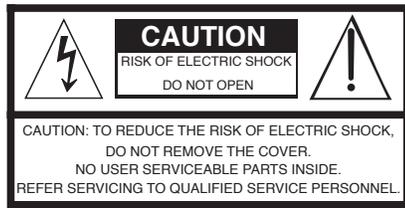

The lightning flash with the arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

IMPORTANT SAFETY & INSTALLATION INSTRUCTIONS

INSTRUCTIONS PERTAINING TO THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

WARNING: When using electric products, basic precautions should always be followed, including the following:

1. Read all of the Safety and Installation Instructions and Explanation of Graphic Symbols before using the product.
2. Do not use this product near water - for example, near a bathtub, washbowl, kitchen sink, in a wet basement, or near a swimming pool, or the like.
3. This product should only be used with a stand or cart that is recommended by the manufacturer.
4. This product, either alone or in combination with an amplifier and speakers or headphones, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist.
5. This product should be located so that its location or position does not interfere with its proper ventilation.
6. This product should be located away from heat sources such as radiators, heat registers, or other products that produce heat.
7. This product should be connected to a power supply only of the type described in the operating instructions or as marked on the product.
8. This product may be equipped with a polarized line plug (one blade wider than the other). This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace your obsolete outlet. Do not defeat the safety purpose of the plug.
9. The power supply cord of the product should be unplugged from the outlet when left unused for a long period of time. When unplugging the power supply cord, do not pull on the cord, but grasp it by the plug.
10. Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
11. The product should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged;
 - B. Objects have fallen, or liquid has been spilled into the product;
 - C. The product has been exposed to rain;
 - D. The product does not appear to be operating normally or exhibits a marked change in performance;
 - E. The product has been dropped, or the enclosure damaged.
12. Do not attempt to service the product beyond that described in the user maintenance instructions. All other servicing should be referred to qualified service personnel.
13. **WARNING:** Do not place objects on the product's power supply cord, or place the product in a position where anyone could trip over, walk on, or roll anything over cords of any type. Do not allow the product to rest on or be installed over cords of any type. Improper installations of this type create the possibility of a fire hazard and/or personal injury.

RADIO AND TELEVISION INTERFERENCE

WARNING: Changes or modifications to the instrument not expressly approved by Kurzweil could void your authority to operate the instrument.

IMPORTANT: When connecting this product to accessories and/or other equipment use only high quality shielded cables.

NOTE: This instrument has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This instrument generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this instrument does cause harmful interference to radio or television reception, which can be determined by turning the instrument off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the instrument and the receiver.
- Connect the instrument into an outlet on a circuit other than the one to which the receiver is connected.
- If necessary consult your dealer or an experienced radio/television technician for additional suggestions.

The normal function of this product may be disturbed by strong electro magnetic interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in another location.

NOTICE: This apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

AVIS: Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class B prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

SAVE THESE INSTRUCTIONS

Table of Contents

Chapter 1 Introduction

Primary Features	7
------------------------	---

Chapter 2 Getting Started

Setting Up the MPS20	8
Volume	8
Connecting the Power Supply	9
Music Rack	10
Assembling the Stand	11
Quick Start	12

Chapter 3 MPS20 Overview

Front Panel	13
Front Panel Display, Buttons and Controls	14
Display and Navigation Buttons	14
Voice, Rhythm, and Piano Buttons	15
Bank LEDs and Category Buttons	15
Favorites and Demo Buttons	15
Recording and Play/Stop Buttons	16
Variation and Tempo Buttons	16
Mode and Save Buttons	16
Volume Control	16
Rear Panel	17
Front Panel Buttons	18
Single Buttons	18
Double Button Presses	18
Press and Hold Buttons	18
Quick Parameter Buttons	19
Operating Modes	19

Chapter 4 Demo Mode

Demo Mode	20
Playing Demo Songs	20
Selecting Demo Songs	20
Demo Song List	21

Chapter 5 Voice Mode

Voice Mode	22
Selecting Voices	23
Changing the Default Voice	23
Storing a Favorite Voice	23



Chapter 6 Layering

Layer Mode	24
Layer Mode Navigation Buttons	24
Selecting a Voice.....	25
Layer Mode Parameters	25
Layer Voice	26
Layer Volume	26
Layer Transposition	26
Saving Layered Voices	27
Save Button.....	27
Favorites Buttons	27
Changing Layered Voices	27

Chapter 7 Splitting

Split Mode	28
Split Mode Navigation Buttons	28
Selecting a Voice.....	29
Split Mode Parameters	29
Split Voice	30
Split Key	30
Split Volume	30
Split Transposition	30
Saving Split Voices.....	31
Save button	31
Favorite button	31
Changing Split Voices	31

Chapter 8 Function Mode

Function Mode.....	32
Function Mode Parameters	32
Transpose	32
Effect Level	32
Touch.....	33
Tune	33
MIDI Channel	33
Metronome	34
Rec Rhythm	34
Local Control.....	34
Hard Reset	34
OS/Objects Version	34

Table of Contents

Chapter 9 Rhythm Mode

Rhythm Mode	35
Entering Rhythm Mode.....	35
Selecting a Rhythm Pattern	35
Changing the Default Rhythm Pattern	36
Playing a Rhythm Pattern.....	36
Changing the Tempo	36
Rhythm Mode Parameters	37
Rhythm ID.....	37
Volume	37

Chapter 10 Recording

Recording a Song.....	38
Preparing to Record	38
Recording Track 1	38
Recording Track 2	39
Editing a Song.....	39
Erasing/Recording over Tracks	39
Punch-Ins	39

Chapter 11 MIDI

MIDI Channels	40
MIDI In and Out Ports	40
USB MIDI Connection	41

Appendices

MIDI Implementation Chart	42
Rhythm Patterns	43
Voice List	44
MPS20 Features	46

Introduction

Congratulations on your purchase of the Kurzweil MPS20.

You are certain to enjoy many hours exploring the variety of features as well as the beautiful preset voices.

The MPS20 is designed with the same sound technology from the world acclaimed PC3 Series keyboard.

Primary Features

- 88-Note, Fully-Weighted, Graded Hammer-Action Keyboard
- 200 Preset Voices
- 100 Preset Rhythm Patterns
- 10 Drum Kits
- Scrolling alphanumeric LED display
- Layering, Split, and Transpose
- 6 user "Favorites" presets
- 10 different levels of keyboard sensitivity
- Two track recording
- Dedicated button to select the Grand Piano voice
- Variation, Metronome, and Tempo Buttons
- Preset Effects including Reverb, Echo, Delay, and Chorus
- Stereo Audio Input and Output jacks
- 2 Headphone jacks
- Standard MIDI In and Out
- USB Computer port
- MIDI file compatibility

Setting Up the MPS20

Your new MPS20 carton should have the following:


- MPS20 instrument
- DC Power Adapter and AC cord
- Music Rack
- Piano-style Pedal
- Warranty Card
- MPS20 User's Manual (this manual)

If you are missing any of the above, please contact your Kurzweil dealer. It is always a good idea to save the MPS20's carton, in case you need to ship it.

Before you connect cables and turn on the power, place the MPS20 on a stable surface.

If you purchased the optional stand, follow the procedure on page 11 to assemble it.

Volume

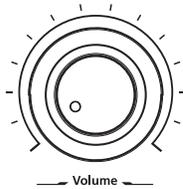

Before turning on the MPS20, it's always a good idea to set the volume at its minimum setting (all the way to the left).


For a generally comfortable level of volume while playing, set the knob at its middle position.

The Volume Control is located on the left side of the control panel. Turn this knob from left to right to control the amount volume.

Connecting the Power Supply

The MPS20's power is supplied by a DC power adapter. Before connecting the MPS20's power adapter, make sure that the power switch (located on the upper right end of the instrument) is in the off position (not pushed in).

Connect the power adapter to the DC jack on the rear panel of the MPS20.

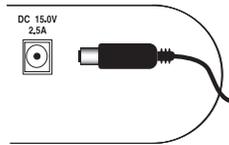


CAUTION: All DC power adapters are NOT the same!

Only use the DC power adapter supplied with the MPS20. Connecting the wrong DC power adapter could damage the MPS20.


If the power adapter is damaged or lost, contact your Kurzweil Dealer to order a replacement.

Then connect the power cord to an AC outlet.

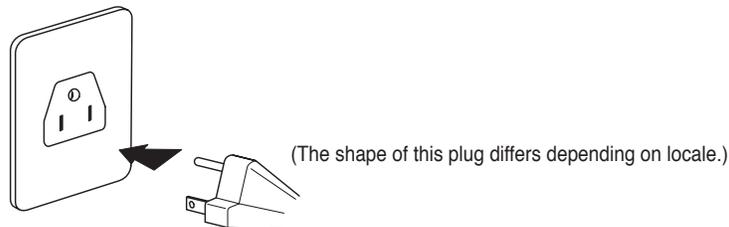

Music Rack

Figure 1

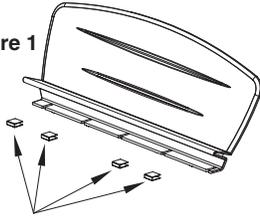


1) Attaching the Felt Strips

Music racks are shipped with four black, adhesive-backed felt strips that need to be attached before you use the music rack for the first time.


Attach the four black, adhesive-backed felt strips to the bottom of the music rack. Figure 2 shows the installed location of the felt strips.

Figure 2

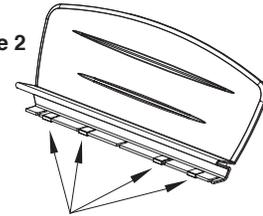

2) Attaching the Music Rack.

There is an opening on the back of the MPS20 for the music rack. To install it, stand at the front of the MPS20 keyboard, position the music rack so that its center lines up with center of the LED display. Then move the music rack toward you. It should easily slide into place.

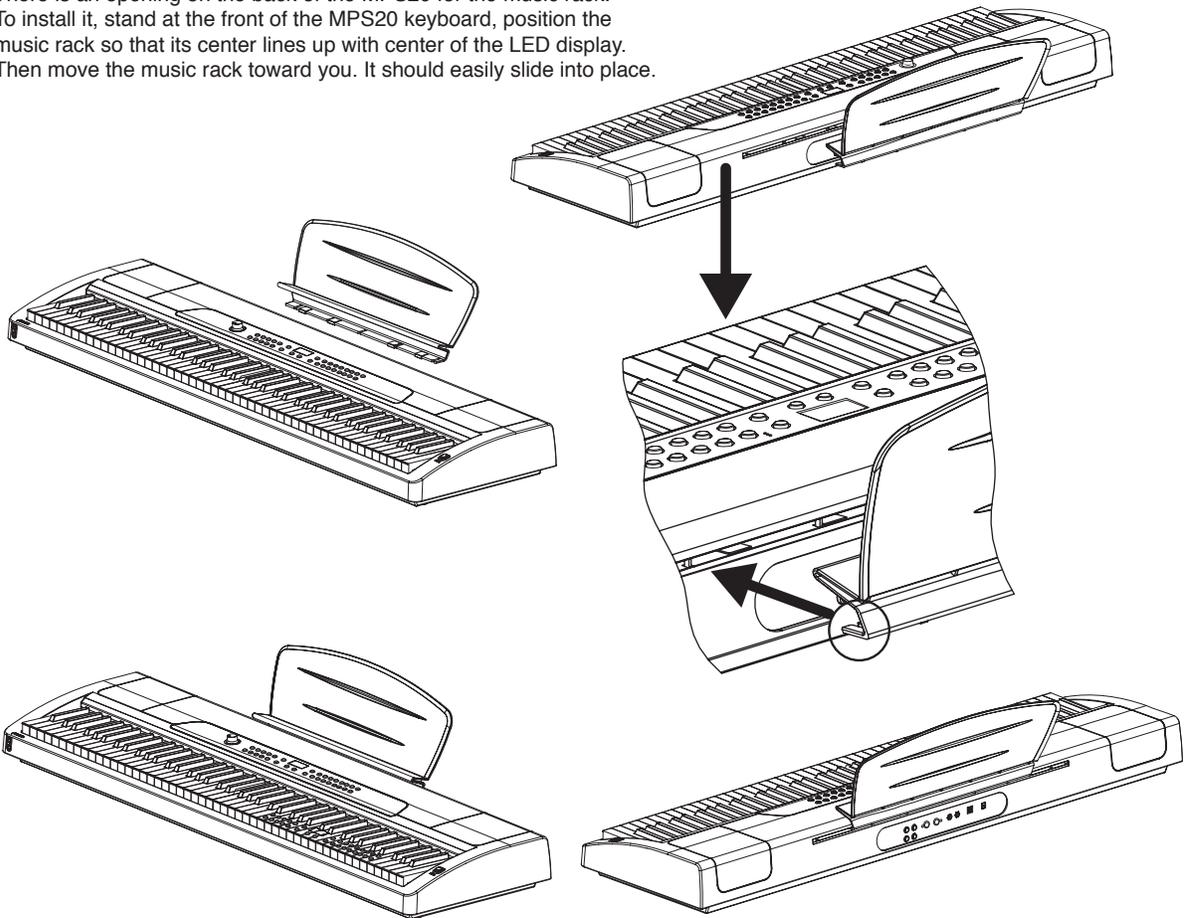

Assembling the Stand

Hardware



6.2cm Screw
(4 Pieces)




1.5cm Screw
(4 Pieces)



Plastic Cap
(4 Pieces)

1) Connecting the Left Side Panel.

Install two of the 6.2cm screws through the left side panel (1) to the rear panel (3).


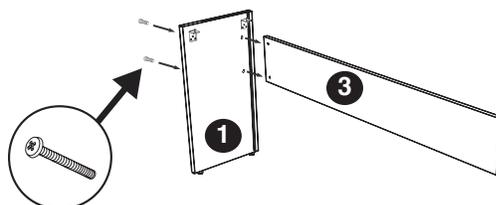


2) Connecting the Right Side Panel.

Install the two remaining 6.2cm screws through the right side panel (2) to the rear panel (3).


Be sure to tighten the four screws.

Install the four plastic caps over the screw holes after tightening the screws.

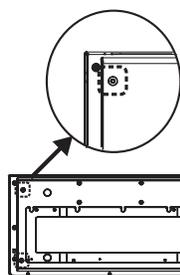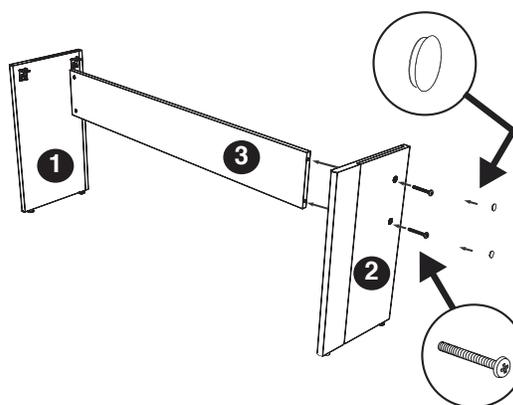

3) Securing the MPS20 to the stand.

Lower the MPS20 onto the stand and install the four 1.5cm screws up through the brackets on the stand into the bottom of the MPS20.

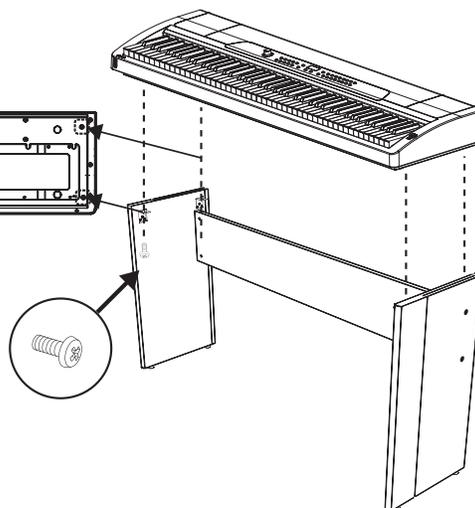

After the MPS20 is set up and the power adapter connected, press the power switch. While the unit is performing its power-up routine, the LED display and some of the button LEDs flash. After a couple of seconds, the display scrolls **! GRAND PIANO**. The MPS20 is now ready to play. Use the following Quick Start for the basic steps to change Voices, play Rhythm patterns, and play one of the 51 Demo Songs.

Quick Start

Playing the Voices

1. Turn on the power.
2. The Voice button LED is lit and the first voice (1 Grand Piano) is ready to play.
3. To play another voice, press any category button and play.
4. There are a number of different voices available under each category button. Press the **[Prev]**  or **[Next]**  button to step through the available voices.
5. There are two Voice Bank rows and an LED at the beginning of each row that, when lit, tells you it is the active row. To select a voice from a category listed in the second Voice Bank row, press the **[Voice]** button.
6. The LED at the beginning of the second should be lit.
7. Select a category button and play.
8. Press the **[Voice]** button again to return to the top row.


Playing a Rhythm Pattern

1. Press the **[Rhythm]** button.
2. Select a rhythm pattern from one of the categories and press its button.
3. There are a number of different rhythm patterns available under each category button. Press the **[Prev]**  or **[Next]**  button to step through the available rhythm patterns.
4. Press the **[Play/Stop]** button to start the rhythm.
5. Press the **[Play/Stop]** button again to stop it.

Playing a Demo Song

1. Press the **[Demo]** button.
2. The first demo song immediately plays. The MPS20 continues to play each of the 51 demo songs until you press the **[Play/Stop]**, **[Demo]** or **[Voice]** buttons.
3. At any time you can press the **[Play/Stop]** button to start or stop playing a demo song.
4. Press the **[Prev]**  or **[Next]**  button to play the previous or next demo song.
5. Simultaneously press the **[Prev]**  and **[Next]**  buttons to jump ahead 10 songs at a time.
6. Press the **[Voice]** button to exit Demo Mode.

Front Panel

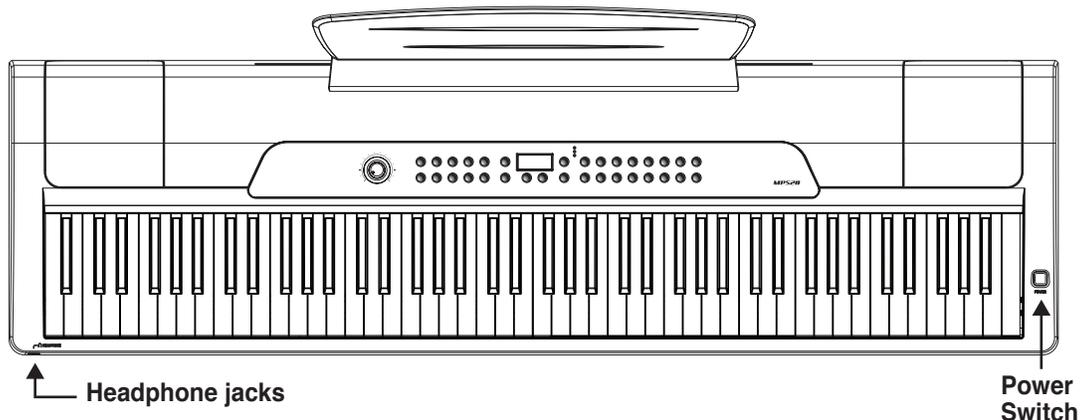


Power Switch

As shown in the above illustration, the power switch is located at the upper right end of the MPS20. Turn the power on and off by pressing the switch. (The power switch button pushed in is the *On* position and out is the *Off* position.)


Headphone Jacks

The MPS20 has two 1/4" headphone jacks conveniently located on the left front edge of the keyboard cabinet. Plugging in headphones provides privacy during practice. Both jacks operate the same so two people can play and hear the music together. While using headphones, the MPS20's speakers are silent.

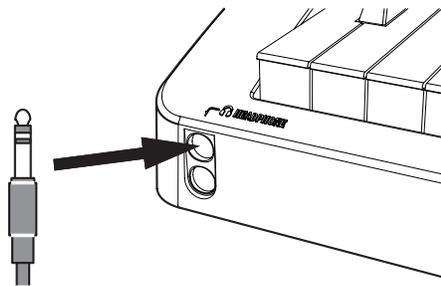

Front Panel Display, Buttons and Controls

Here is a quick overview of the MPS20's front panel. A description of its individual features follows.

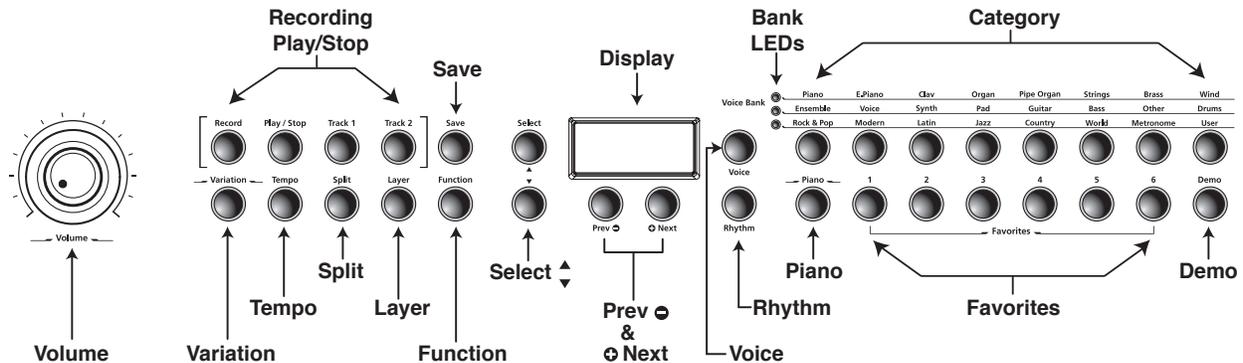


Display and Navigation Buttons

Display

Scrolling alphanumeric LED display.

Select ▲ and ▼ Buttons

Use these buttons to move through the list of available parameters for the current mode. These buttons are used in Function, Split, Layer, and Rhythm Modes only.

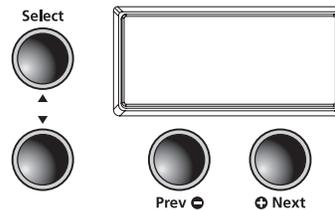

Prev ◀ Button

Press this button to select the next lower Voice, Rhythm pattern, user song or parameter value. When using the metronome or playing a Rhythm pattern, use this button to decrease the tempo. This button is also used to tune or transpose downward.

▶ Next Button

Press this button to select the next higher Voice, Rhythm pattern, user song or parameter value. When using the metronome or playing a Rhythm pattern, use this button to increase the tempo. This button is also used to tune or transpose upward.

Voice, Rhythm, and Piano Buttons

Voice Button


Press this button to enter Voice mode.

Rhythm Button


Press this button to enter Rhythm mode.

Piano Button

No matter what mode is active, select this button to immediately return to the Grand Piano voice (the first voice of the Piano category).

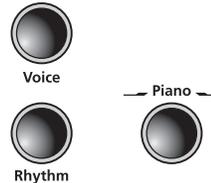

Bank LEDs and Category Buttons

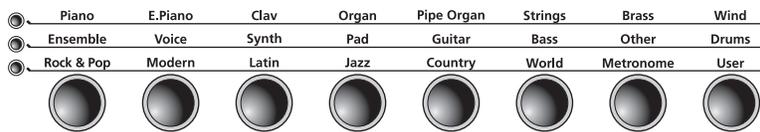

Bank LEDs

These three LEDs are indicators for the three category banks (two voice and one rhythm). Press the [Voice] or [Rhythm] button to select a bank. A lit LED indicates the active bank.

Category Buttons

Press one of the category buttons to select a voice or rhythm pattern.

Favorites and Demo Buttons




Favorites 1 through 6

Select a [Favorites] button to store favorite voices, layers and splits.

Demo Button

Press this button to enter Demo Mode to play one of the many demo songs stored in the MPS20.

Recording and Play/Stop Buttons

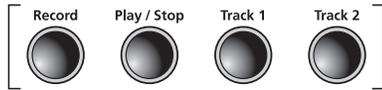

Record Button

Press this button to begin recording.


Play/Stop Button

Select this button to play or stop recording, user songs, Rhythm patterns, and Demos.

Track 1 and Track 2 Buttons

Use these buttons to select the track to record.

Variation and Tempo Buttons

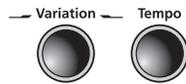


Variation Button

Press the [Variation] button to add the preset effects.

Tempo Button

Use the [Tempo] button to adjust the tempo of the metronome and Rhythm patterns.

Mode and Save Buttons

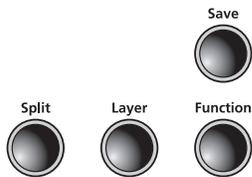

Split Button

Press the [Split] button to enter Split Mode and create split voices.

Save Button

Press this button to save a user song or to save split and layered voices.


Function Button

Press the [Function] button to enter Function Mode.

Layer Button

Press the [Layer] button to enter Layer Mode and create layered voices.


Volume Control

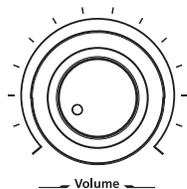

Volume

Adjusts the volume of the MPS20.

Rear Panel

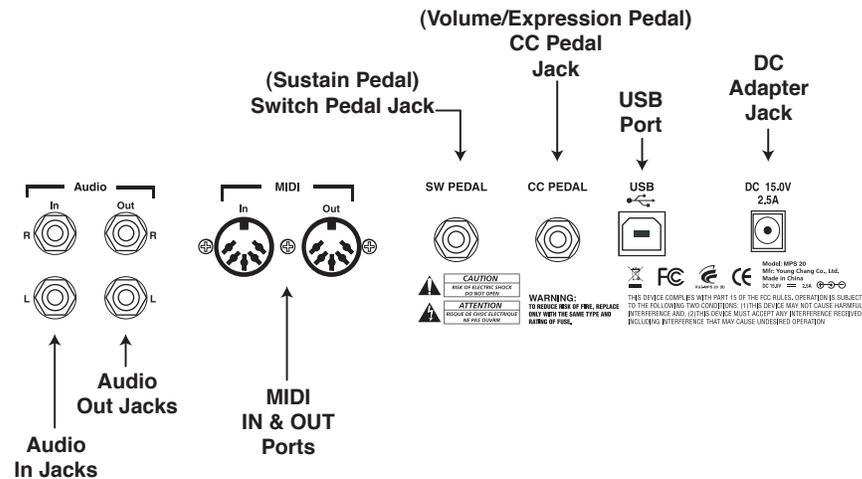

Audio In

Use these 1/4" jacks to connect the MPS20's internal speakers to other devices such as an MP3 player or CD player. Always turn off the MPS20's power before plugging or unplugging cables into the Audio In jacks.

Audio Out

Use these 1/4" jacks to connect the MPS20 to external audio equipment. Use 1/4" mono (unbalanced) cables.

MIDI In & Out

Use the MIDI In and Out ports to connect the MPS20 to other MIDI devices to receive and send MIDI data.

Switch Pedal (Sustain Pedal)

Connect the included piano-style pedal to this jack and use it as a sustain pedal. A dual switch pedal can also connect to this jack or two single switch pedals connected via a mono Y cord adapter. In this instance, the right pedal controls sustain and the left sostenuto.

CC Pedal (Volume/Expression Pedal)

Use this 1/4" jack to connect a continuous controller pedal and assign it to control volume and expression.

USB

Connect a USB cable to this port to send and receive MIDI or to connect to a computer for system updates.

DC

Connect the DC Adapter to this jack.


Front Panel Buttons

Single Buttons

There are 32 buttons on the MPS20 Front Panel. Most buttons have LEDs that light up when the button is pressed and remain lit to show the button is active. Four buttons do not have LEDs, they are: **[Select]** ▲ and ▼, **[Prev]** ⌂, and ⌂ **[Next]**.

Double Button Presses

Certain buttons, when pressed simultaneously with another button, have other functions. They are called button pairs. The MPS20 has two button pairs: **[Select Jump]** and **[Value Jump]**.

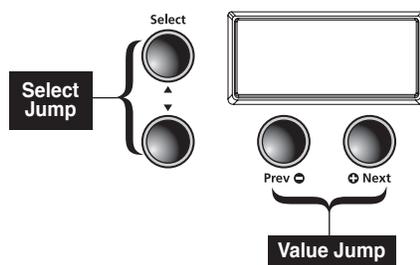

Select Jump

Simultaneously press the **[Select]** ▲ and ▼ buttons.

Value Jump

Simultaneously press the **[Prev]** ⌂, and ⌂ **[Next]** buttons.

Press and Hold Buttons

Some buttons, when held, perform additional functions. Below is a brief description of these buttons.

Category Buttons

In Voice or Rhythm Mode, pressing a category button selects the default or first voice for that category. You can change the default voice or rhythm. To do so, select the voice or rhythm you want to use as the default. Press and hold the category button until the display scrolls **SRVED**, then the ID number. (Release the button when **SRVED** scrolls across the display.)

Prev ⌂ and Next ⌂ Buttons

Press and hold either button and it will repeat until it is released.

Favorites Buttons


Press and hold one of the six **[Favorites]** buttons to store the current voice, layer or split.

Hard Reset

To clear all user data and return the MPS20 to its default settings, you need to perform a Hard Reset. First turn off the MPS20. Press and hold the C8 key (highest key on the keyboard), then press and release the power switch.

As soon as you see **RESETTING...** scroll across the display, release the C8 key.

The MPS20 is ready to play.

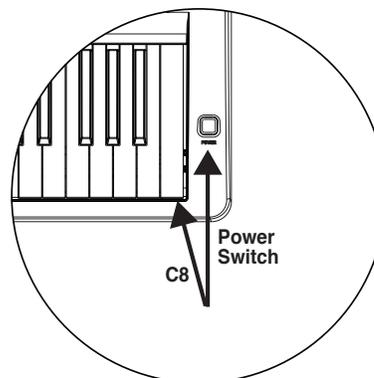

Quick Parameter Buttons

Quick parameter buttons are named as such because they are parameter buttons accessible from the front panel. The MPS20 has two quick parameter buttons: **[Tempo]** and **[Variation]**.

A quick parameter button can be accessed from any mode, except recording.

Tempo Quick Parameter Button

Press the **[Tempo]** quick parameter button to change the tempo. Use the **[Prev]**  or **[Next]**  button to decrease or increase the tempo.

If no action is performed after pressing the Tempo button, the button will time out and the MPS20 exits the Tempo quick parameter and returns to its previous state.

You can also exit the Tempo quick parameter by pressing the **[Tempo]** button again.

Default Setting: 120

Range: 20 to 300

Reset: **[Value Jump]** button pair

Variation Quick Parameter Button

Press the **[Variation]** quick parameter button to add preset effects (if any) to the current voice.

Operating Modes


Most of the MPS20's features are organized in groups called modes. The MPS20 has six operating modes. The following chapters describe each of the operating modes.

- Demo
- Voice
- Rhythm
- Layer
- Split
- Function

Demo Mode

The MPS20 has 51 prerecorded grand piano songs performed in a variety of classic styles that demonstrate the quality of its Grand Piano voice.

Playing Demo Songs

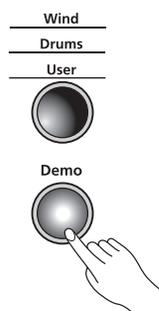

The **[Demo]** button is located on the far right side of the front panel; it is the last button on the second row.

Press the **[Demo]** button to enter Demo Mode.


The first demo song, Brahms-Rhapsody, begins to play and its song number and name scrolls across the display. When the first song ends, the next demo song begins to play. This continues through all 51 demo songs.

See the following page for a complete list of the demo songs.



Press the **[Play/Stop]** button to start or stop playing a demo song.

Selecting Demo Songs

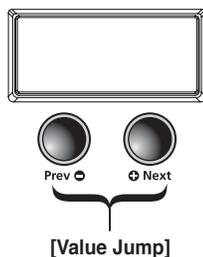

To step through the demo songs and select another song to play, press the **[Prev]**  button to select previous demo song or the **[Next]**  button to select the next demo song. You may have to press the **[Play/Stop]** button to stop the current demo song and press the **[Play/Stop]** again to start the next demo song.

To skip forward 10 songs at a time, press the **[Value Jump]** button (simultaneously pressing the **[Prev]**  and **[Next]**  buttons).

If you press the **[Prev]** button while a demo song is playing, one of two things occurs. If the demo song has been playing for less than two seconds, pressing the **[Prev]** button returns to the previous demo song. After two seconds, the current song is restarted.

There is a keyboard key (keys A0 through B4) assigned to each demo song. To select a demo song using a key on the keyboard, press the **[Record]** button then press and release its corresponding key. See the Demo Song List for the demo songs and their corresponding keyboard keys.

To exit Demo Mode, press the **[Demo]**, **[Voice]** or **[Piano]** buttons.


Demo Song List

No.	Song Name	Key	Composer
1	Rhapsody	A0	J. Brahms
2	Prelude I	A#0	J. S. Bach
3	Invention No. 4	B0	J. S. Bach
4	Invention No. 8	C1	J. S. Bach
5	Prelude II	C#1	J. S. Bach
6	Aria Goldberg	D1	J. S. Bach
7	Fuga II	D#1	J. S. Bach
8	Sonatine Op.36	E1	M. Clementi
9	Klavierstück	F1	W. A. Mozart
10	Piano Sonate	F#1	W. A. Mozart
11	Rondo in D	G1	W. A. Mozart
12	Piano Sonate K.3	G#1	W. A. Mozart
13	Piano Sonate K.5	A1	W. A. Mozart
14	Minuet in G	A#1	L. V. Beethoven
15	Bagatelle No. 25	B1	L. V. Beethoven
16	Sonatine Op.55	C2	Fr. Kuhlau
17	March Militaire	C#2	F. P. Schubert
18	Moments Musicaux	D2	F. P. Schubert
19	Impromptu No. 2	D#2	F. P. Schubert
20	Impromptu No. 4	E2	F. P. Schubert
21	La Chevaleresque	F2	J.F. Burgmüller
22	Without words	F#2	J. L. F. Mendelssohn
23	Venetianisches	G2	J. L. F. Mendelssohn
24	Sostenuto	G#2	F. F. Chopin
25	Valse KK	A2	F. F. Chopin
26	5 Mazurkas	A#2	F. F. Chopin
27	Valse Op.69 No. 2	B2	F. F. Chopin
28	Grande Valse	C3	F. F. Chopin
29	Valse Op.64 No. 2	C#3	F. F. Chopin
30	Nocturne No. 2	D3	F. F. Chopin
31	Valse Op.64 No. 1	D#3	F. F. Chopin
32	Preludes in Db	E3	F. F. Chopin
33	Fantaisie-Improm	F3	F. F. Chopin
34	Träumerei	F#3	R. Schumann
35	Fröhlicher Landma	G3	R. Schumann
36	Von fremden Länd	G#3	R. Schumann
37	Liebesträume #3	A3	F. Liszt
38	Dolly's Dreaming	A#3	T. Oesten
39	Frühlingsstimmen	B3	J. Strauss
40	The Swan	C4	Saint-Saëns
41	Blumenlied	C#4	G. Lange
42	Valsette	D4	F. Borowski
43	Old French Air	D#4	P. I. Tchaikovsky
44	Mazurka	E4	P. I. Tchaikovsky
45	Polka	F4	P. I. Tchaikovsky
46	Barcarolle	F#4	P. I. Tchaikovsky
47	Humoreska	G4	A. Dvorak
48	Suite 'Peer Gynt	G#4	E. Grieg
49	Suite Bergamasque	A4	C. A. Debussy
50	Rêverie	A#4	C. A. Debussy
51	Arabesque I	B4	C. A. Debussy

Voice Mode


When you turn on the MPS20, Voice Mode is active and the Grand Piano voice is already selected and ready to play. Grand Piano is the default voice and the first voice in the Piano category.

In Voice Mode, voices are selected first by choosing one of two Voice Banks, then a category.

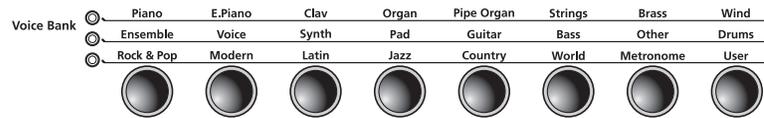

There are two rows of Voice Bank categories and one row of **Voice Bank** buttons. Categories generally group instruments by type.

To the left of each Voice Bank category row, is an LED. A lit LED indicates the active Voice Bank. To select the second Voice Bank row, press the **[Voice]** button again. Its LED lights and the second row of categories is active.

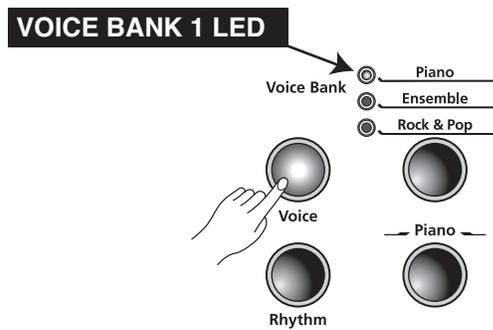

Selecting Voices


If the MPS20 is not already in Voice Mode, press the **[Voice]** button.

Press the button for the category you want. Its LED lights and the default voice for that category is selected.

To select another voice from the category, press the **[Prev]** ◀ or **[Next]** ▶ button to navigate through the available voices. If you are pressing the **[Next]** ▶ button and reach the last voice of the category, the MPS20 automatically advances to the first voice of the next category. If you are pressing the **[Prev]** ◀ button and reach the first voice of the category, the MPS20 automatically moves to the last voice of the previous category.

Press the **[Value Jump]** button (simultaneously press the **[Prev]** ◀ and **[Next]** ▶ buttons) to select the default or first voice of the current category. If the first voice of a category is already selected, pressing the **[Value Jump]** button selects the first voice of the next category. This cycles through and wraps back to the first category.

A complete list of the Voices by category begins on page 44.

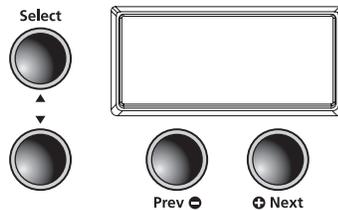

Changing the Default Voice


Pressing a category button selects the default or first voice for that category. You can change the default voice. To do so, select the voice you want to use as the default. Press and hold the category button until the display scrolls **SAVE**, then the ID number. (Release the button when **SAVE** scrolls across the display.)

Storing a Favorite Voice

You can quickly save any voice as a favorite. Just select a voice, then press and hold one of the six **[Favorites]** buttons at least 1.5 seconds. The voice is now stored in that location.

In addition to the many presets already available in the MPS20, you can create layered voices and add even more depth and breadth to its rich sounds.

Layering combines two of the MPS20 voices enabling you to play both voices each time a key is pressed.

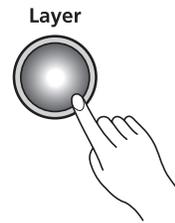

Layer Mode Navigation Buttons

Depending on the selected parameter and the current mode, some buttons operate differently. The following is a description of the Layer Mode navigation buttons.

Select ▲ and ▼ Buttons


Use these buttons to step through the parameters.

Prev ◀ or Next ▶ Buttons

For the Layer Voice parameter, use these buttons to step through the category voices. In Layer Volume or Layer Transposition, use these buttons to increase or decrease a value.

Category Buttons


In Layer Voice, use this button to select another category; it acts the same as it would in Voice Mode. If the Layer Volume or Layer Transposition parameter is active, pressing a category button returns the MPS20 to the Layer Voice parameter.

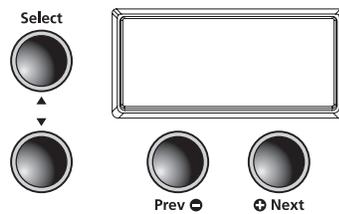

Selecting a Voice

To create a layered voice, press the **[Layer]** button to enter Layer Mode.

The **[Layer]** button is located on the left side of the front panel.

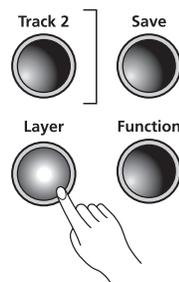

When the **[Layer]** button is pressed, the current voice becomes the primary layer voice.

Select the voice you want to use as your primary voice. Then press the **[Layer]** button to enter Layer mode. The **[Layer]** button LED lights and **PRG:87** scrolls across the display. This is the secondary voice of the layer. (The default voice is 87, LA Strings.)

The primary voice is now layered with the secondary voice.

Using the parameters available in Layer Mode, you can modify the layered voices. The first parameter, Layer Voice, is active when you press the **[Layer]** button. Descriptions of the Layer Mode parameters follow.

To exit Layer Mode, press the **[Layer]** button.

Layer Mode Parameters

There are three parameters available in Layer Mode. Changing the value of a parameter determines the performance of the layer.

In Layer Mode, use the **[Select]** ▲ and ▼ buttons to step through the parameters. To change the value of parameter, press the **[Prev]** ⊖ or **[Next]** ⊕ button.



NOTE: Changes to the Layer Voice, Layer Volume and Layer Transposition are remembered for the next time you layer; but are not stored in memory. They return to their default settings when you turn off the MPS20. Be sure to save your changes as one of the Favorites!

Layer Voice

This parameter is for the secondary voice. When you press the **[Layer]** button, this parameter is active and the secondary voice ID number, PR5:87, (87, the default voice) scrolls across the display. To choose a different voice as the secondary voice, select a category and use the **[Prev]**  or **[Next]**  button to step through the list of voices.

Default Setting: PRG:87, LA Strings

Range: Any available voice

Reset: **[Value Jump]** button pair resets to the default voice

Layer Volume

This parameter sets the volume between the layered voices. When you select the Layer Volume parameter, the display scrolls VOL:0 (0 is the default setting). The value range of this parameter is +/-0-9. Use the **[Prev]**  button to decrease the volume of the secondary voice or the **[Next]**  button to increase its volume.

Default Setting: 0

Range: +/-0-9

Reset: **[Value Jump]** button pair

Layer Transposition

This parameter sets the transposition of the secondary voice relative to the primary voice. You can transpose the secondary voice up or down one or two octaves from the primary voice. When you select this parameter the display scrolls XPOSE:0 ST. Use the **[Prev]**  or **[Next]**  button to transpose the secondary voice.

Default Setting: 0 ST

Range: -24 ST, -12 ST, 0 ST, 12 ST, 24 ST

Reset: **[Value Jump]** button pair

Saving Layered Voices

There are two ways you can save a layered voice along with your changes to the volume and transposition. Both are quickly executed with just a couple of button presses. The first way is to select the **[Save]** button and enter the Save Dialog, the second is using a **[Favorites]** button. A description of each method follows.

Save Button

When you enter the Save dialog, the display shows the location of the first empty favorite location. You can use the **[Prev]**  or **[Next]**  button to change the location. **[Value Jump]** alternates between the first empty favorite location and **Favorite 1**. Continuously pressing the **[Prev]**  or **[Next]**  button cycles through all six favorite locations.

To save your layered voice, press the **[Save]** button. Its LED is flashing and the display scrolls **SAVE VOICE AS FX**. (X represents the favorites location.)

Press the **[Save]** button again to save the layered voice. The layered voice is now saved and the MPS20 exits the Save Dialog and returns to Voice Mode.

Favorites Buttons

This method is an even quicker way to save a layered voice. Select a **[Favorites]** button to store the layered voice. Then press and hold the button at least 1.5 seconds. The layered voice is now stored in that location. At this point, the MPS20 is in Voice Mode, the just saved layered voice is active, and its ID number is in the display.



NOTE: If you don't save the current changes and exit Layer Mode, the MPS20 remembers the last layered voice. Just press the **[Layer]** button again and your changes should still be available to save. Be sure to save your changes before you turn off the MPS20 or they will be lost.

Changing Layered Voices

If you have saved a layered voice as a favorite and want to make a change, select the favorite. Press the **[Layer]** button to enter Layer Mode.

The primary voice remains the same and the secondary voice is the default voice. You can select another voice to use as the secondary voice, make changes, and save the newly layered voice just as you did when you created and saved the original.

Splitting

Creating a Split allows you to divide the MPS20 keyboard into an upper and lower region. For example, you can create a split and play Piano with the right hand and Bass with the left hand.



Split Mode Navigation Buttons

Depending on the selected parameter and the current mode, some buttons operate differently. The following is a description of the Split Mode navigation buttons.

Select ▲ and ▼ Buttons


Use these buttons to step through the parameters.

Prev ◀ or Next ▶ Buttons

For the Split Voice parameter, use these buttons to step through the category voices. In Split Key, Split Volume or Split Transposition, use these buttons to increase or decrease a value.

Category Button


In Split Voice, use this button to select another category; it acts the same as it would in Voice Mode. If the Split Key, Split Volume or Split Transition parameter is active, pressing a category button returns the MPS20 to the Split Voice parameter.

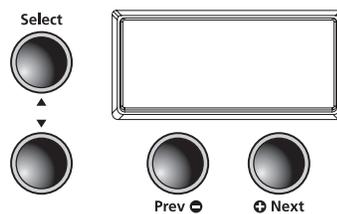

Selecting a Voice

To create a split, press the **[Split]** button to enter Split Mode.

The **[Split]** button is located on the left side of the front panel.

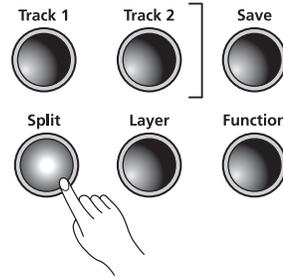

When the **[Split]** button is pressed, the current voice becomes the primary (right hand) split voice.

Select the voice you want to use as your primary voice. Then press the **[Split]** button to enter Split Mode. The **[Split]** button LED lights and **PR5:183** scrolls across the display. This is the secondary (left hand) voice for the split. (The default voice ID number is 183, E Bass, and the default split key is F#3.)

The key range of the split voice is as follows:

A0 through F#3 for the secondary voice
G3 through C8 for the primary voice

Using the parameters available in Split Mode, you can modify the secondary voice.

The first parameter, Split (secondary) Voice, is active when you press the **[Split]** button. A description of the parameters follows.

To exit Split Mode, press the **[Split]** button.

Split Mode Parameters

There are four parameters available in Split Mode. Changing the value of a parameter determines the performance of the split voice.

In Split Mode, use the **[Select]** ▲ and ▼ buttons to step through the parameters. To change the value of parameter, press the **[Prev]** ⏪ or **[Next]** ⏩ button.



NOTE: Changes to the Split Voice, Split Key, Split Volume, and Split Transposition are remembered for the next time you want to use a split voice; but are not stored in memory. They return to their default settings when you turn off the MPS20. Be sure to save your changes as one of the Favorites!

Split Voice

This parameter is for the secondary voice. When you press the **[Split]** button, this parameter is selected and the secondary voice ID number, **PR5:XX**, scrolls across the display. (XX represents the voice ID number.) To choose a different voice as the secondary voice, select a category and use the **[Prev]**  or **[Next]**  button to step through the list of voices.

Default Setting: PRG:183, E Bass

Range: Any available voice

Reset: **Value Jump** button pair resets to the default voice

Split Key

Use this parameter to select the split key. The split key is the highest key of the secondary voice. When you select the Split Key parameter, the display scrolls **KEY:F#3** (the default key). Press another key to make it the split key.

Default Voice Setting: PRG:183, E Bass

Default Split Key Setting: F#3

Range: Keys A0 through B7

Reset: **[Value Jump]** button pair

Split Volume

This parameter sets the volume between the split voices. When you select the Split Volume parameter, the display scrolls **VOL:0** (0 is the default setting). The value range of this parameter is +/-0-9. Use the **[Prev]**  button to decrease the volume of the secondary voice or the **[Next]**  to increase its volume.

Default Setting: 0

Range: +/-0-9

Reset: **[Value Jump]** button pair

Split Transposition

This parameter sets the transposition of the secondary voice relative to the primary voice. You can transpose the secondary voice up or down one or two octaves from the primary voice. When you select this parameter the display scrolls **XPOSE:0 ST**. Use the **[Prev]**  or **[Next]**  button to transpose the secondary voice.

Default Setting: 0 ST

Range: -24 ST, -12 ST, 0 ST, 12 ST, 24 ST

Reset: **[Value Jump]** button pair



NOTE: Changes to the Split Voice, Split Key, Split Volume, and Split Transposition are remembered for the next time you want to use a split voice; but are not stored in memory. They return to their default settings when you turn off the MPS20. Be sure to save your changes as one of the Favorites!

Saving Split Voices

There are two ways you can save a split voice along with your changes. Both are quickly executed with just a couple of button presses. The first way is to select the **[Save]** button and enter the Save Dialog, the second is using a **[Favorites]** button. A description of each method follows.

Save button

When you enter the Save dialog, the display shows the location of the first empty favorite location. You can use the **[Prev]**  or **[Next]**  button to change the location. **[Value Jump]** alternates between the first empty favorite location and **[Favorite 1]**. Continuously pressing the **[Prev]**  or **[Next]**  button cycles through all six favorite locations.

To save your split voice, press the **[Save]** button. Its LED is flashing and the display scrolls **SAVE VOICE AS FX**. (X represents the favorites location.)

Press the **[Save]** button again to save the split voice. The split voice is now saved and the MPS20 exits the Save Dialog and returns to Voice Mode.

Favorite button

This method is an even quicker way to save a split voice. Select a **[Favorites]** button to store the split voice. Then press and hold the button at least 1.5 seconds. The split voice is now stored in that location. At this point, the MPS20 is in Voice Mode, the just saved split voice is active, and its ID number shows in the display.



NOTE: If you don't save the current changes and you exit Split Mode, the MPS20 remembers the last split voice. Just press the **[Split]** button again and your changes should still be available to save. Be sure to save your changes before you turn off the MPS20 or they will be lost.

Changing Split Voices

If you have saved a split voice as a favorite and want to make a change, select the favorite. Press the **[Split]** button to enter Split Mode.

The primary voice remains the same and the secondary voice is the default voice. You can select another voice to use as the secondary voice, make changes, and save the newly split voice just as you did when you created and saved the original.

Function Mode

Function Mode includes parameters that allow you to change the behavior of the entire instrument. Also included is the Hard Reset function and the parameter to check the installed Operating System and Objects version. The following is a list of available parameters in function mode.

- Transpose
- Effect Level
- Touch
- Tune
- MIDI Channel
- Metronome
- Rec Rhythm
- Local Control
- Hard Reset
- OS/Object

Press the **[Function]** button to enter function mode.

To exit Function Mode, press the **[Function]** button a second time.



NOTE: Changes to Function Mode parameters affect all voices.

Function Mode Parameters

Transpose

The transpose parameter allows you to adjust the overall pitch of the keyboard up or down in semitone intervals.

- Default Setting:** 0
- Range:** -24 ST through 24 ST
- Reset:** **[Value Jump]** button pair

Effect Level

This parameter controls the level of the effects used on a voice. You can adjust the amount of effect from 0% (no effect) to 100%, (maximum).

- Default Setting:** 20%
- Range:** 0% through 100%
- Reset:** **[Value Jump]** button pair

Touch

Use this parameter to adjust the keyboard touch sensitivity to your playing technique. See the chart below for the available settings.

Linear	Best dynamic range for all instruments.
Light 1 Light 2 Light 3	For players with a light touch. Adjust this parameter to achieve a good dynamic range. These settings are from Light 1, a slightly light touch to Light 3, a very light touch.
Hard 1 Hard 2 Hard 3	For players with a heavier touch. Adjust this parameter to achieve a good dynamic range. These settings are from Hard 1, a slightly harder touch to Hard 3, a very hard touch.
Piano Touch	Best for piano dynamics.
Easy Touch	Light touch, especially for younger players.
GM Receive	Select this when playing General MIDI songs.

Default Setting: Linear
Range: (see chart above)
Reset: [Value Jump] button pair

Tune

This parameter allows you to adjust the tuning. You can easily tune the MPS20 to other instruments or recordings.

Default Setting: 0, A-440
Range: -100 to 100 cents
Reset: [Value Jump] button pair

MIDI Channel

This parameter controls the MIDI transmit channel used for Voice Mode. You can select Channels 1 through 9 and Channels 11 through 15. Channel 10 is reserved for rhythm playback and Channel 16 for the metronome. (See Chapter 11, MIDI, beginning on page 40.)

Default Setting: Channel 1
Range: Channels 1–9 and Channels 11–15
Reset: [Value Jump] button pair

Metronome

This parameter has three settings: On, Rec or Off. The default setting is Off, no metronome. If you choose On, the metronome sounds while playing or recording. To hear the metronome only while recording, choose Rec.

Default Setting: Off
Range: On, Rec or Off
Reset: [Value Jump] button pair

Rec Rhythm

This parameter controls whether a rhythm pattern plays during recording. The default for this parameter is Off. If you record a song and want the rhythm pattern recorded as well, be sure to change this parameter to On.

Default Setting: Off
Range: On or Off
Reset: [Value Jump] button pair

Local Control

This parameter is normally set to On. When you play the MPS20 keyboard you hear the resident or "local" voices. If you use your MPS20 with an external sequencer or computer, turn this setting to Off. Turning the setting Off, avoids creating a MIDI loop (stuck notes or "echos").

Default Setting: On
Range: On or Off
Reset: [Value Jump] button pair

Hard Reset

This function resets the MPS20 to the original factory default settings. All user changes, saved Favorites, and user recorded songs are erased.

When you select Hard Reset the display scrolls **RESET!** Press the [Next]  button. The display now scrolls **CONFIRM?** Press the [Next]  button again to reset the MPS20.

If you want to cancel the Hard Reset and remain in Function Mode, press the [Prev]  button. Press any other button to exit Function Mode.


OS/Objects Version

This parameter displays the current operating software and objects version. The display first scrolls the OS version, then the Object version. Visit the Kurzweil website (www.kurzweil.com) to verify that your MPS20 has the latest versions. Select the Downloads tab, then select MPS20. The available files are listed. Complete installation instructions are included in the downloaded files.

There are 100 rhythm patterns stored in the MPS20. The rhythm patterns include a wide variety of musical styles. The labels directly above the category buttons list the different rhythm categories. A complete list of the available rhythm patterns begins on page 43.

Entering Rhythm Mode


Press the **[Rhythm]** button to enter Rhythm Mode. The **[Rhythm]** button's LED lights up as well as the **Rhythm Bank LED**. The display shows the ID number of the current rhythm pattern.

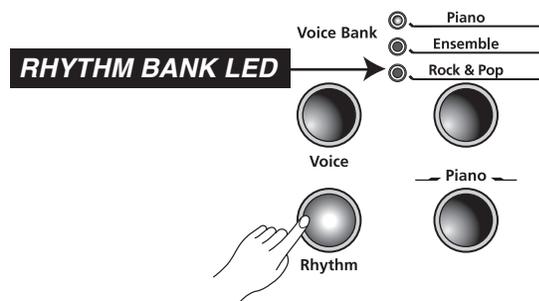

Selecting a Rhythm Pattern

There are eight category buttons in the Rhythm Bank. The first seven buttons are for the rhythm patterns and are grouped by style. The eighth button, labeled **[User]**, is for user recorded songs.

After you select a category, press the **[Prev]**  or **[Next]**  button to scroll through the rhythm patterns. When you reach the end of a category, the MPS20 automatically advances to the next or previous category. It will also advance to the **User** category. If there are no user recorded songs, it will bypass the **User** category and go to the next or previous category.

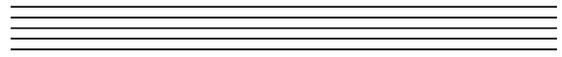

Changing the Default Rhythm Pattern

Pressing a category button selects the default rhythm pattern for that category. You can change the default rhythm pattern. To do so, select the pattern you want for the default rhythm. Press and hold the category button until the display scrolls **SRVE** then shows the ID number. (Release the button when **SRVE** scrolls across the display.)

The default rhythm pattern is ID number 1, Ballad1.

Playing a Rhythm Pattern


Select a category and rhythm pattern, then press the **[Play/Stop]** button to play the rhythm pattern. Press the **[Play/Stop]** button again to stop.

Once you select a rhythm pattern, it is remembered as the current pattern in Voice Mode. If you save a voice as a **[Favorites]**, the current rhythm pattern is also saved.

Changing the Tempo

You can change the tempo of any of the MPS20's rhythm patterns. The default tempo is 120, but it can range from 20 to 300 beats per minute.

To change the tempo, press the **[Tempo]** button. Its LED lights and the display shows the current tempo. Press the **[Prev]**  button to decrease the tempo or press the **[Next]**  button to increase the tempo.

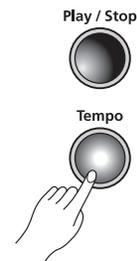


To return to the default setting of 120 BPM, press and release the **[Tempo]** button then press the **[Value Jump]** button pair (simultaneously press the **[Prev]**  and **[Next]**  buttons).



NOTE: Tempo changes affect all rhythm patterns, even Favorites.

Rhythm Mode Parameters

The available parameters in Rhythm Mode are: Rhythm ID and Volume. Press the **[Select]** ▲ or ▼ button to select a Rhythm Mode parameter.

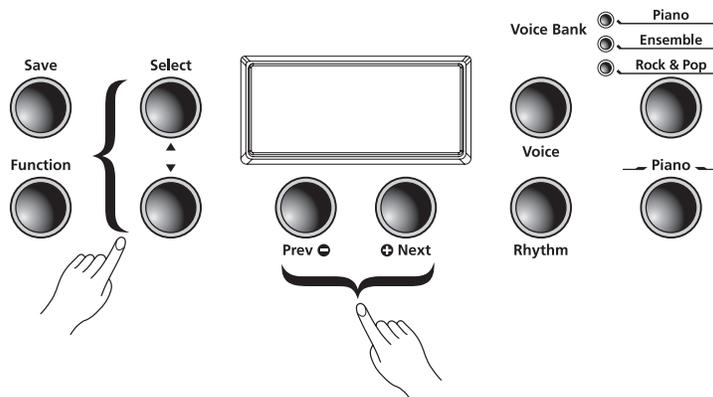

Rhythm ID

The default parameter is Rhythm ID. Pressing the **[Select Jump]** button pair (**[Select]** ▲ and ▼ buttons simultaneously) defaults to this parameter.

The **[Value Jump]** button pair (pressing the **[Prev]** ◀ and **[Next]** ▶ buttons simultaneously) advances to the first rhythm of the current category. If you continue to press the **[Value Jump]** button, you can advance to the first rhythm in each category. This cycles through and wraps back to the first category. If there are no user recorded songs, the display scrolls the song ID, U1, and EMPTY.

Volume

Use the Rhythm Mode volume parameter to change the volume of the rhythm pattern for playback or recording. The volume range is from 1 (minimum) to 9 (maximum). The default volume setting is 9 (maximum).

In Rhythm Mode, press the **[Select]** ▲ or ▼ button. The display scrolls VOL:X (X represents the current volume setting). Press the **[Prev]** ◀ and **[Next]** ▶ button to increase or lower the volume.



NOTE: Changing the volume affects all rhythm patterns, even Favorites.

To reset the volume to the default setting, press the **[Value Jump]** button pair (simultaneously press the **[Prev]** ◀ and **[Next]** ▶ buttons).

Recording a Song

The MPS20 has a two track recorder. You can record two voice tracks and a rhythm pattern accompaniment. Favorites can be used to give you even more versatility while recording. For example, you can have a Favorite split voice such as Piano and Bass recorded in Track 1 and a layered favorite in Track 2.

Preparing to Record

If you want to have a rhythm pattern play while recording, select the **[Function]** button to enter Function Mode. Press the **[Select]** ▲ or ▼ buttons to step through the list of parameters. The default setting for the **REC RHYTHM** parameter is **OFF**, press the **[Prev]** ◀ or **[Next]** ▶ button to change the value to **ON**.

You can leave this parameter set to **ON**. There is a "no rhythm" pattern available, rhythm ID number 351. Select this rhythm pattern and no rhythm will play.



NOTE: The default setting for the metronome is also **OFF**. Follow the instructions described above to enter Function Mode, but select the **METRO:OFF** parameter and change its setting to **METRO:REC**. This will allow the metronome to play during recording.

Recording Track 1


Select the voice you want to use for Track 1. To record a song with a rhythm pattern, press the **[Rhythm]** button and select a pattern for your recording.

Press the **[Record]** button. Its LED lights and the display scrolls **RECORD READY**. The **[Track 1]** button's LED should also be lit.


To begin recording, press the **[Play/Stop]** button and start playing.



NOTE: If you are using the metronome, it will count off one measure before recording begins.

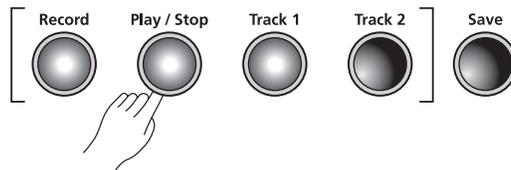

When you are finished, press the **[Play/Stop]** button again. The **[Save]** button's LED starts flashing and the display shows **SAVE RHYTHM RS UX** (X represents the number of the first available empty user song location). There are 20 available song locations, U1 through U20.

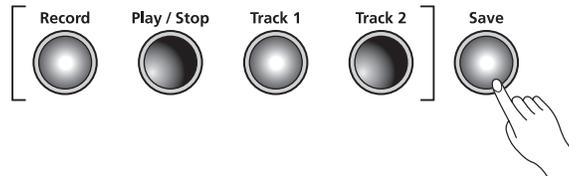

Recording Track 2

Press the **[Track 2]** button, then the **[Record]** button. Again, the display scrolls **RECORD READY** message. Press the **[Play/Stop]** button to begin recording Track 2. (Track 1 is playing while recording Track 2.) Press the **[Play/Stop]** button again when you are finished.

The **[Save]** button's LED is flashing and the display shows **SAVE RHYTHM RS UX** (X represents the user song location number of Track 1).

Editing a Song



NOTE: Before you erase or punch-in, be sure you have the correct track selected.

Erasing/Recording over Tracks

Select the user recorded song and press the button for the track you need to erase. Press the **[Play/Stop]** button, then press the **[Record]** button and start playing. Press the **[Play/Stop]** button when you are finished and press the **[Save]** button to save the song.

Punch-Ins

Punching in is a way to correct mistakes on a recording without re-recording the entire track.

Select the user recorded song and press the button for the track you need to change. Press the **[Play/Stop]** button. Your song begins to play. When it reaches the part you need to correct, press the **[Record]** button and play the note(s) you need to punch-in the recording. After the punch-in, press the **[Play/Stop]** button.



NOTE: If you do not press the **[Play/Stop]** button after you Punch-In, you will erase the remaining portion of the track.

MIDI is the acronym for Musical Instrument Digital Interface. It is the industry standard protocol that allows the exchange of musical data between electronic musical instruments, devices (such as sequencer), and computers. MIDI enables MIDI equipped devices designed by different manufacturers the ability to communicate MIDI data to each other.

MIDI data is sent or received using standard MIDI cables to connect to other MIDI devices or a USB cable to connect to a computer.

The MPS20 is equipped with conventional MIDI In and Out ports and a USB port.

MIDI Channels

Similar to television channels, MIDI protocol transmits multiple channels of MIDI performance data. Typical MIDI instruments can play up to 16 channels at the same time. Each channel can be assigned its own voice.

To change and/or assign MIDI channels, enter Function Mode and select the MIDI Channel parameter. See page 33 for the details.

MIDI In and Out Ports

The MPS20 is equipped with the conventional MIDI In and MIDI Out ports. If you are new to MIDI, the MIDI In port is used to receive MIDI data from another MIDI device; and the MIDI Out port is used to transmit MIDI data to another MIDI device.

When you connect the MIDI Out of the MPS20 to the MIDI In of another instrument, you can play the sounds of both instruments simultaneously from the MPS20 keyboard.



When you connect the MIDI In of the MPS20 to the MIDI Out of another controller, you can control the MPS20 using the other controller.




USB MIDI Connection

In addition to the conventional MIDI In and MIDI Out ports, the MPS20 also has a USB (Universal Serial Bus) port on the rear panel. You can connect the MPS20 directly to a computer with a USB cable. This connection transmits and receives MIDI data between the MPS20 and the computer.

The MPS20 supports the “Plug and Play” feature used in the Windows XP or higher and Macintosh operating systems. No drivers are required to use this connection; but you may need to enable MIDI on your computer’s sound and audio control panel.

To use the MPS20 as a MIDI controller with a computer, use any Type-A to Type-B USB cable. By default, the MPS20 acts as a MIDI controller (not a hard drive) when connected to a computer.

If you have a sequencer program installed on your computer, you can use this USB connection to record and play your music. The MPS20’s recorder is actually a sequencer and the performances you record into the MPS20’s memory is MIDI performance data. Using a computer based sequencer program provides unlimited memory, editing, and posting on the internet.

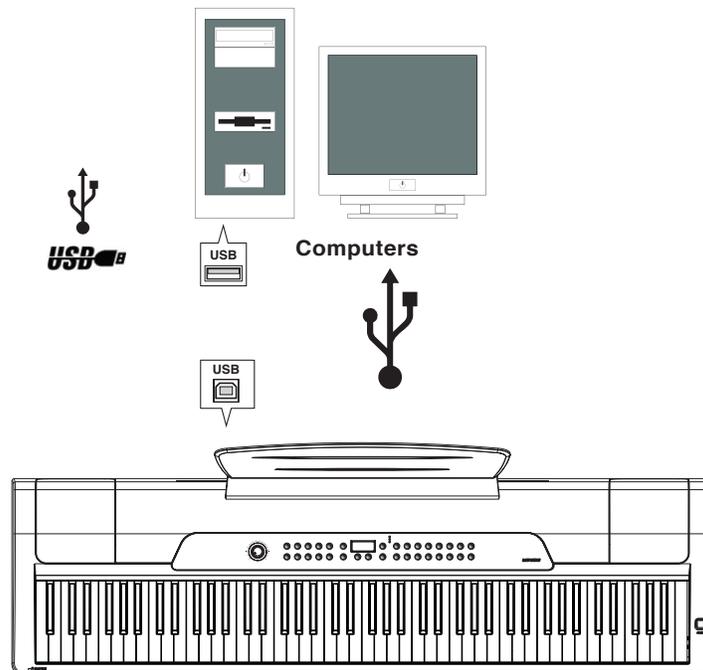

MIDI Implementation Chart

Model: MPS20

**Manufacturer:
Young Chang Music**

**Date: 10/05/2011
Version 1.0**

Function	Transmitted	Recognized	Remarks
Basic Channel	Default	1	Memorized
	Changed	1 - 16	
Mode	Default	Mode 3	Use Multi mode for multi-timbral applications
	Messages	All	
	Altered		
Note Number		0 - 127	Key Range: A0-C8
	True Voice	12 - 120	
Velocity	Note ON	O	
	Note OFF	O	
After Touch	Keys	X	
	Channels	X	O
Pitch Bender		X	O
Control Change	0, 32 Bank Select (MSB, LSB) 7 Volume 10 Pan 11 Expression 64 Sustain Pedal 66 Sostenuto Pedal 80 Sound Variation	O	0 - 31 32 - 63 (LSB) 64 - 127
Program Change		O	0 - 127
	True #		0 - 127
System Exclusive		O	O*
System Common	Song Pos.	X	O
	Song Sel.	X	O
	Tune	X	X
System Real Time	Clock	X	O
	Messages	X	O
Aux Messages	Local Control	X	O
	All Notes Off	X	O
	Active Sense	X	X
	Reset	X	X
Notes	*Manufacturer's ID = 07 Device ID: default = 0		O = yes X = no

Rhythm Patterns

No.	Rhythm Pattern	Button
1	Ballad1	Rock & Pop
2	Ballad2	Rock & Pop
3	Ballad3	Rock & Pop
4	Ballad4	Rock & Pop
5	Ballad5	Rock & Pop
6	Ballad6	Rock & Pop
7	Ballad7	Rock & Pop
8	Ballad8	Rock & Pop
9	Pop1	Rock & Pop
10	Pop2	Rock & Pop
11	Pop3	Rock & Pop
12	Pop4	Rock & Pop
13	Pop5	Rock & Pop
14	Pop6	Rock & Pop
15	Pop7	Rock & Pop
16	Pop8	Rock & Pop
17	Rock1	Rock & Pop
18	Rock2	Rock & Pop
19	Rock3	Rock & Pop
20	Rock4	Rock & Pop
21	Rock5	Rock & Pop
22	Rock6	Rock & Pop
23	Rock7	Rock & Pop
24	Rock8	Rock & Pop
25	Triplet Rock	Rock & Pop
26	Half-time Rock	Rock & Pop
27	Twist	Rock & Pop
51	R&B/Dance1	Modern
52	R&B/Dance2	Modern
53	R&B/Dance3	Modern
54	R&B/Dance4	Modern
55	R&B/Dance5	Modern
56	R&B/Dance6	Modern
57	R&B/Dance7	Modern
58	Urban1	Modern
59	Urban2	Modern
60	Club1	Modern
61	Club2	Modern
62	Acid House	Modern
63	Slow Jam	Modern
64	Electro	Modern
65	New Jack	Modern
66	Breakbeat	Modern
67	Gospel	Modern
68	West Coast Hip-hop	Modern
69	Revrn	Modern
70	House Beat	Modern
71	Syncopath	Modern
101	Latin1	Latin
102	Latin2	Latin
103	Latin3	Latin
104	Latin4	Latin
105	Latin5	Latin

No.	Rhythm Pattern	Button
106	Latin6	Latin
107	Cha Cha	Latin
108	Salsa	Latin
109	Rumba	Latin
110	Samba	Latin
111	Samba 2	Latin
112	Bossa Nova	Latin
113	Son Clave	Latin
114	Calypso	Latin
115	Songo Calypso	Latin
116	Songo	Latin
117	Mambo 1	Latin
118	Mambo 2	Latin
151	Jazz1	Jazz
152	Jazz2	Jazz
153	Jazz3	Jazz
154	Jazz4	Jazz
155	Jazz5	Jazz
156	Jazz6	Jazz
157	Jazz7	Jazz
158	Jazz8	Jazz
159	Spy Jazz	Jazz
201	Country1	Country
202	Country2	Country
203	Country3	Country
204	Country4	Country
205	Country6	Country
206	Country5	Country
207	Country7	Country
208	Country8	Country
209	Western	Country
251	World1	World
252	World2	World
253	World3	World
254	World4	World
255	World5	World
256	World6	World
257	Polka	World
258	Reggae 1	World
259	Nanigo 1	World
260	Nanigo 2	World
261	Maqsum	World
262	Kherwa	World
263	Afrobeat	World
264	March	World
265	Reggaeton	World
266	Kpanlogo	World
301	Metro 1/8nt	Metronome
302	Metro 1/16nt	Metronome
303	Metro 3/4	Metronome
304	Metro 6/8	Metronome
305	1/4 Metronome	Metronome
351	No rhythm	Metronome

Voice List

No.	Voice	Button
1	Grand Piano	Piano
2	Pro Piano	Piano
3	Grand Piano 2	Piano
4	Piano & Strings	Piano
5	Piano & Pad	Piano
6	Piano & Vox	Piano
7	Big Pop Piano	Piano
8	Blues Piano	Piano
9	Rock Piano	Piano
10	Pop Upright	Piano
11	Upright Piano	Piano
12	Horowitz Piano	Piano
13	Vanguard Piano	Piano
14	Piano Recital	Piano
15	Jazz Piano	Piano
16	Bright Piano	Piano
17	Piano Silk	Piano
18	New Age Piano	Piano
19	Piano Stack	Piano
20	Piano Lushness	Piano
21	Piano & Strings 2	Piano
22	Air Piano	Piano
23	Dreamy Piano	Piano
24	Ivory Harp	Piano
25	Stevie's Rhds	E. Piano
26	Hotrod EP	E. Piano
27	Fagen's Rhds	E. Piano
28	These Eyes	E. Piano
29	E Piano & Pad	E. Piano
30	Misty Mtn. EP	E. Piano
31	Supertramp EP	E. Piano
32	Joni EP	E. Piano
33	Ray's Wurly	E. Piano
34	Austin Wurly	E. Piano
35	Classic DX	E. Piano
36	DX Pad	E. Piano
37	90's DX	E. Piano
38	Soft Ballad	E. Piano
39	80's DX	E. Piano
40	Classic 70's	E. Piano
41	Power CP	E. Piano
42	Gabriel CP	E. Piano
43	Crisp Clav	Clav
44	Steely Clav	Clav
45	Fuzz Clav	Clav
46	Wah Clav	Clav
47	Talking Clav	Clav
48	Zep Clav	Clav
49	Stereo Clav	Clav
50	Harpsichord	Clav
51	Baroque Harpsi	Clav
52	Piano Harpsi	Clav
53	Celeste	Clav

No.	Voice	Button
54	Mellow Organ	Organ
55	Perc Organ	Organ
56	Gregg's B	Organ
57	Perc Organ 2	Organ
58	Melvin's Gospel	Organ
59	Thick Gospel	Organ
60	Prog Perc B3	Organ
61	Traffic B3	Organ
62	Warmer B3	Organ
63	Blues & Gospel	Organ
64	David's B3	Organ
65	Growler B	Organ
66	Rock B3	Organ
67	Boston B	Organ
68	Sweet Organ	Organ
69	Gimmie B3	Organ
70	Doors Vox	Organ
71	Farfisa	Organ
72	Pipe Stops	Pipe Organ
73	Chapel Organ	Pipe Organ
74	All Stops	Pipe Organ
75	All Stops Choir	Pipe Organ
76	Open Flute	Pipe Organ
77	Stop Flute	Pipe Organ
78	Diapason Organ	Pipe Organ
79	Bourdon Organ	Pipe Organ
80	Reed Organ	Pipe Organ
81	Gamba Organ	Pipe Organ
82	Celeste Organ	Pipe Organ
83	Ballpark Stop	Pipe Organ
84	Viol Organ	Pipe Organ
85	2 Ft. Open Flute	Pipe Organ
86	2 Ft. Stop Flute	Pipe Organ
87	LA Strings	Strings
88	Pop Strings	Strings
89	Octave Strings	Strings
90	Pizzicato	Strings
91	Studio A Strings	Strings
92	Mello Yes	Strings
93	Octave Tron	Strings
94	Lead Strings	Strings
95	Lead Tutti Mix	Strings
96	Aggressive Str	Strings
97	Adagio Pizz	Strings
98	Lead & Adagio	Strings
99	Solo Violin	Strings
100	Solo Viola	Strings
101	Solo Cello	Strings
102	Adagio Strings	Strings
103	Slow Strings	Strings
104	Mute Trumpet	Brass
105	Bright Solo Tpt	Brass
106	French Horn Solo	Brass

No.	Voice	Button
107	Brass Fanfare	Brass
108	R&B Funk	Brass
109	Horn Layer	Brass
110	Brass Chorale	Brass
111	Solo Tenor Sax	Wind
112	Jazz Flute	Wind
113	Fife & Drums	Wind
114	Solo Flute	Wind
115	Piccolo	Wind
116	Mello Flute	Wind
117	Oboe	Wind
118	Clarinet	Wind
119	Woodwinds	Wind
120	Pan Flute	Wind
121	Bottle Blow	Wind
122	Horns & Strings	Ensemble
123	Winds & Strings	Ensemble
124	Gothic Orch	Ensemble
125	Imperial Orch	Ensemble
126	Battle Scene Orch	Ensemble
127	Victory Orch	Ensemble
128	Wind Express Str	Ensemble
129	Pastoral Orch	Ensemble
130	Silver Orch	Ensemble
131	William Tell Str	Ensemble
132	Daniel's Orch	Ensemble
133	Slow Interlude	Ensemble
134	White Satin Split	Ensemble
135	Magic Orchestra	Ensemble
136	Full Choir	Voice
137	Haah Choir	Voice
138	Manhattan Vocal	Voice
139	Aaah Vocals	Voice
140	Jazzy Scat	Voice
141	Mello Choir	Voice
142	Scat Choir	Voice
143	Voice Oohs	Voice
144	Lead Synth	Synth
145	Piano Synth	Synth
146	Synth Bell	Synth
147	Sync Pulse	Synth
148	Synth Orch	Synth
149	Whale Call	Synth
150	Echoplex	Synth
151	Jupiter Synth	Synth
152	Mini Pulse	Synth
153	BPM Lead	Synth
154	Gated Sweep	Synth
155	Cars Synth	Synth
156	Dive Bomb	Synth
157	Heaven & Earth	Pad
158	Slow Pad	Pad

No.	Voice	Button
159	String Pad	Pad
160	Spider Web	Pad
161	Wispy One	Pad
162	Airy Pad	Pad
163	Innervate Pad	Pad
164	Lush Pad	Pad
165	Class Pad	Pad
166	Bladerunner	Pad
167	Fairlight Pad	Pad
168	Airy Impact	Pad
169	Deep Pad	Pad
170	UFO Pad	Pad
171	Alpha Pad	Pad
172	Cosmic Sustain	Pad
173	Acoustic Guitar	Guitar
174	Nylon Guitar	Guitar
175	12 String Steel	Guitar
176	Acoustic Gtr2	Guitar
177	Phaser Guitar	Guitar
178	Lead Guitar	Guitar
179	Fluid Guitar	Guitar
180	Vox 12	Guitar
181	Trem Humbucker	Guitar
182	Rockin' Lead	Guitar
183	E Bass	Bass
184	P Bass	Bass
185	Slap Bass	Bass
186	Fretless Bass	Bass
187	Upright Bass	Bass
188	Levin Bass	Bass
189	Sly Bass	Bass
190	Lowdown Bass	Bass
191	Real Vibes	Other
192	Marimba	Other
193	Harp Mallets	Other
194	Steel Drums	Other
195	Blue Man	Other
196	Mbira	Other
197	Xylophone	Other
198	Sitar	Other
199	Koto	Other
200	Accordion	Other
201	Solid Kit	Drums
202	Latin Kit	Drums
203	Brush Kit	Drums
204	LA Kits	Drums
205	Rock Kits	Drums
206	Headhunters Kit	Drums
207	Electric Kit	Drums
208	Brooklyn Kit	Drums
209	Snoop Kit	Drums
210	Percussion Kit	Drums

MPS20 Features

Keyboard	88-Note, Graded Hammer-Action Keyboard with adjustable touch sensitive keys
Preset Programs	200 Expressive sounds including award winning Triple Strike Grand Piano, all taken from the PC3. (See page 44 for a list.)
Splits/Layers	Quick Split/Layer, easy access with adjustable relative volume
Effects	Dual ambience and effect processors (reverberation and chorus). Rich and complex effects from the PC3 Series.
Drum Patterns	100 prerecorded interactive patterns in a variety of styles
Recorder/Sequencer	2 Track Song Recorder with accompanying rhythm track
Sound System	30-watt 4-speaker stereo sound system
Headphones	(2) 1/4" stereo headphone outs
MIDI I/O	MIDI In and Out connectors
USB	(1) port, "Plug and Play" USB functionality allows MIDI over USB for connecting to/from an external computer sequencer; no software driver needed
Pedals	Single Sustain pedal provided, dual pedal capable; jack for optional single Expression pedal
Polyphony	64 voices
Finishes	Dark Gray
Dimensions	Stand: 1301(L) x 350(W) x 661(H) mm; 51.2(L) x 13.8(W) x 26(H) inches Instrument: 1310(L) x 360(W) x 90(H) mm; 51.6(L) x 14.2(W) x 3.5(H) inches
Weight	39.7 lb/18.30 Kg
Power	90-250V free voltage external power supply

Index

A

Assembling the Stand 11
Audio In and Out 17

B

Bank LEDs 15, 22, 35

C

Category buttons 12, 15, 18, 23, 24, 28, 35, 36
CC Pedal (Volume/Expression Pedal) 17
Connecting the Power Supply 9

D

DC Power Adapter 9
DC Power Adapter jack 17
Demo button 15
Demo Mode 20
Demo Songs
 List 21
 Playing/Selecting a Demo Song(s) 12, 20
Display 14
Double Button Presses 18

E

Editing a Song 39
 Erasing/Recording over Tracks 39
 Punch-Ins 39
Effect Level (Function Mode parameter) 32

F

Favorites button (1 through 6) 15, 18, 27, 31
Front Panel 13
Front Panel Buttons 18
Front Panel Display, Buttons and Controls 14
Function Mode 32

H

Hard Reset 19, 32, 34
Headphone Jacks 7, 13

I

ID
 Layer Voice 26
 Rhythm 37
 Split Voice 30

J

Jacks
 Audio In & Out 17
 DC Power 17

Headphone 7, 13
Pedal 17

L

Layer Mode 24
Layer Mode Parameters 25
LEDs Bank 15, 22, 35
LED Display 14
List
 Demo Song 21
 Rhythm Patterns 43
 Voice 44
Local Control (Function Mode parameter) 34

M

Metronome (Function Mode parameter) 34
MIDI
 Channel (Function Mode parameter) 33
 Channels 40
 Implementation Chart 42
 MIDI In and Out Ports 17, 40
Mode button 16
Modes
 Demo 20
 Function 32
 Layer 24
 Operating 19
 Rhythm 35
 Split 28
 Voice 22
Music Rack 10

N

Navigation buttons 14
Next button 14, 18, 19

O

Operating Modes 19
OS/Objects Version (Function Mode parameter) 34

P

Pedals
 CC pedal (Volume/Expression) 17
 Switch (Sustain) 17
Piano button 15, 20
Play/Stop button 12, 16
Playing a Rhythm Pattern 36
Playing Demo Songs 12, 20
Power Supply 9
Power Switch 13
Press and Hold buttons 18
Prev button 14, 18, 19
Primary Features 7
Punch-Ins 39



Index

Q

Quick Parameter buttons 19
Quick Start 12

R

Rear Panel 17
Rec Rhythm (Function Mode parameter) 34, 38
Record button 16, 20, 21, 38, 39
Recording
 Erasing/Recording over Tracks 39
 Punch-Ins 39
 Track 1 Recording 38
 Track 2 Recording 39
 Song 38
Rhythm button 12, 15, 35, 38
Rhythm ID 37
Rhythm Mode 35
Rhythm Mode Parameters 37
Rhythm Patterns
 List 43
 Playing 12, 36
 Selecting 35

S

Save button 16, 27, 31
Saving Layered Voices 27
Saving Split Voices 31
Select ▲ and ▼ buttons 18, 25, 29, 37, 38
Select Jump buttons 18, 37
Setting Up the MPS20 8
Single buttons 18
Split button 16, 29, 30, 31
Split Key 28, 29, 30
Split Mode 28
Split Mode Parameters 29
Stand Assembly 11
Storing a Favorite Voice 23
Switch Pedal (Sustain Pedal) 17

T

Tempo button 16, 19, 36
Tempo Quick Parameter button 19
Touch (Function Mode parameter) 33
Track 1 and Track 2 buttons 16, 38, 39
Transpose (Function Mode parameter) 32
Transposition Parameter
 Layer Mode 26
 Split Mode 30
Tune (Function Mode parameter) 33

U

USB 17
USB MIDI Connection 41

V

Value Jump button 18, 19, 26, 30, 37
Variation button 16, 19
Voice button 12, 15, 20, 22, 23
Voice List 44
Voice Mode 22
Voice Parameter
 Layer Mode 26
 Split Mode 30
Voices
 Playing/Selecting 12
 Storing a Favorite 23
Volume/Expression Pedal 17
Volume Parameter
 Rhythm Mode 37
 Layer Mode 26
 Split Mode 30
Volume Control 8, 16

KURZWEIL