

K2700 System Update Instructions (KUF v2.00)

11/06/24

FILES INCLUDED IN THIS DOWNLOAD:

Filename	Purpose
K2700-v200-Update-Procedure.pdf	This document, detailing installation steps
K2700-v200-Release-Notes.pdf	A detailed history of all OS enhancements and fixes
K27V200.KUF	Update file containing OS 4.47.38128, Objects 1.05.00 and Boot Loader 1.02.38128

TERMINOLOGY

The screenshots in this document are generic. This is what they mean:

- <PRODUCT> - K2700
- <FILE NAME> - K27V200.KUF
- <FILE SIZE> - 10.1 MB
- SYSTEM MODE version <numbers> - Depending on what is the current System Mode version installed on your keyboard, you will have different numbers displayed at the top right of the main System Mode screen.

UPDATE METHOD:

The K2700 is updated via USB storage device.

Requires: Computer (Mac or PC) with USB port + USB Storage device - such as a flash/thumb drive. (drives drawing 100 mA or less are recommended).

!! CAUTIONS !!

- Before updating, be sure to back up any custom programming. All user memory will be erased during the update. (See the chapter 9 "FILE (Storage Page)" section in the K2700 Musician's Guide for details on saving/reloading your custom data.)
 - It is important that the install is not disrupted once loading begins. Powering off the K2700 or removing the USB device in the middle of loading could leave the K2700 inoperable and then require repair service to restore.
-

UPDATE PROCEDURE:

1. **Insert the USB device into a free USB port on your computer.**

2. **Copy the Update File (.KUF):**

Copy the included .KUF to the flash/thumb device using the method specific to your computer system. Once copied, safely eject/unmount the device before physically unplugging it from the computer's USB port. Once safely ejected, connect the device to the K2700 "Storage" USB port.

3. **Enter SYSTEM MODE:**

Power the K2700 OFF. Press/Hold the ENTER button and turn the K2700 on. Release the ENTER button when the System Mode's menu of options appear on the screen: (see below)



You will use the various "soft buttons" under the screen to control the update process.

It's OK if you have a different version at the top right of the screen. That number could depend on the latest update that was installed in your K2700.

4. Press System Utils:



5. Press Format Flash:




6. Press **OK** to start formatting:



Wait until formatting is complete (this takes about 1 minute).


7. Press **OK** when you see "Done formatting flash":

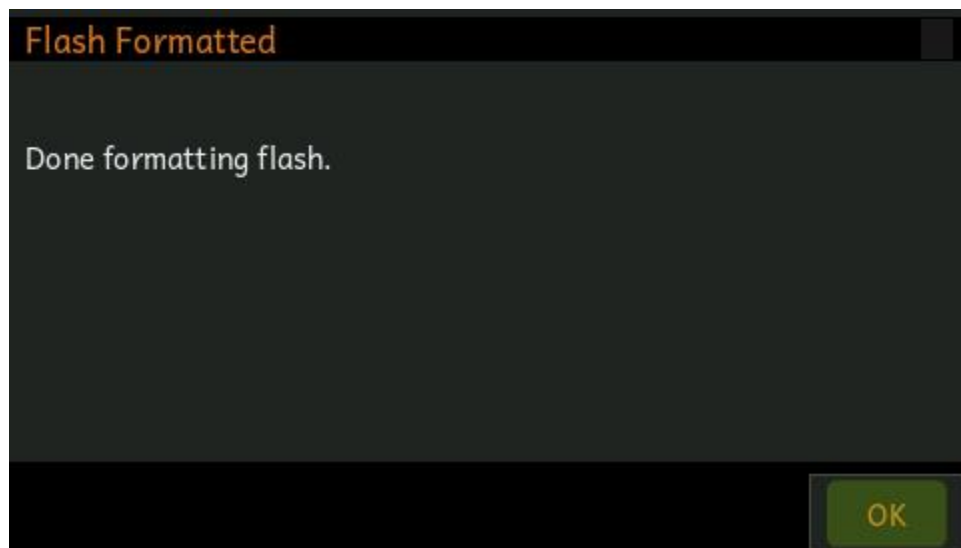

8. Press System Update:



9. Select Storage Type:
Press USB Device

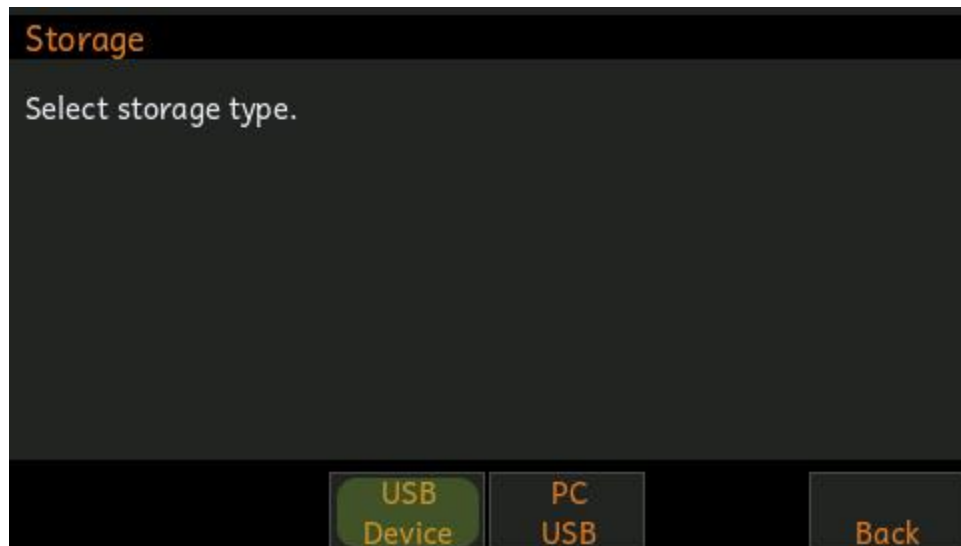


10. **Highlight the .KUF file** (as needed, use the data wheel, up/dn cursor and +/- buttons to navigate the list):




11. **Press OK** to begin loading the update:



A progress screen appears while the file is loaded. A progress bar will move from 0 to 99% a few times while several components are installed. During this process the progress bar may pause at 99%, this is normal:

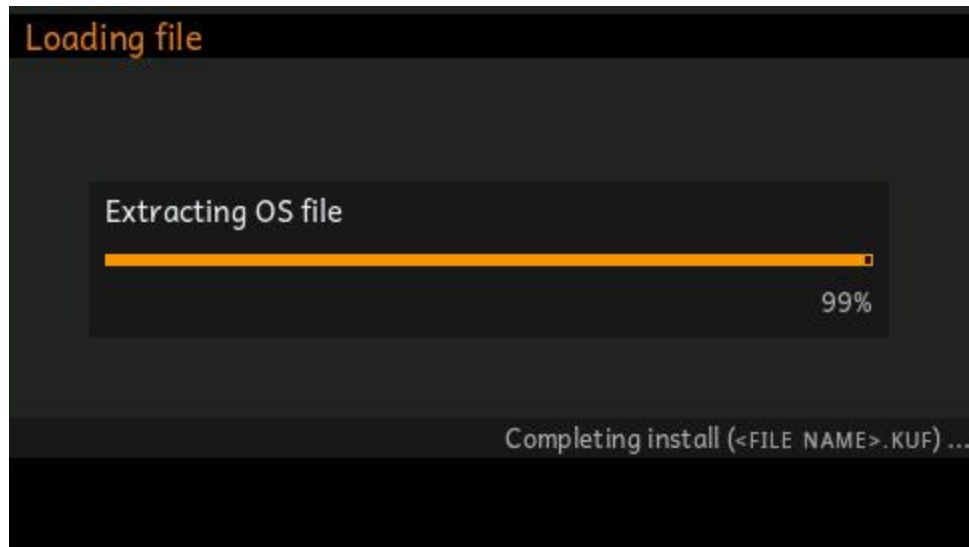

When installation is complete, you will see:

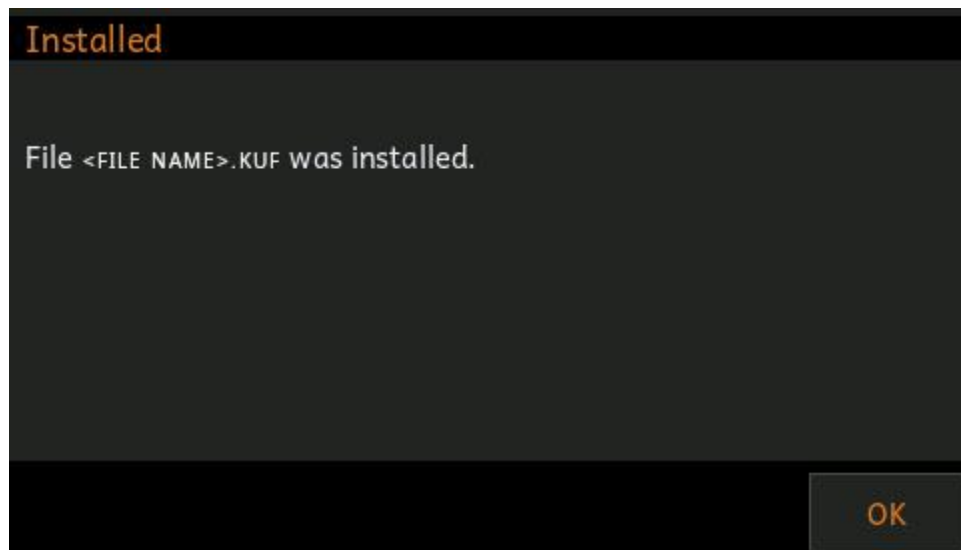

12. **Power the K2700 off and back on.** The K2700 will reboot to normal operating mode and is ready for use.

13. **Confirm the OS and Objects were installed correctly:** Once powered back up, go to GLOBAL mode then press the INFO menu soft button. Confirm you see the following:

MODE:Global Info

O/S Version	4.47.38128
Object Version	1.05.0
Scanner Version	1.00

◀ MORE MIXER TEMPO **INFO** TOOLS MORE ▶

BETA RELEASES will have different numbers than here

If for some reason the install did not complete properly, simply power off and repeat from the beginning.